COMPACT-TRACTORS 3016 - before PIN 14147800 4016 - before PIN 14149628 3018, 3020, 4018, 4020 - ALL Parts Catalog 8-3042

NOTE: This catalog replaces catalog 8-3041

2-93-RP-500-341



#### **ALPHABETICAL INDEX**

#### ENGINE SECTION

	ENGINE S	ECTION ,	
Page	Grid	Page	· Grid
<u></u>	, B6	Flywheel 5	A8
Fill Oldonor	E6-E8	Fuel Pump	B4
Battery	A10-A12	Fuel System	B4
Dicarior, Clarine	A8	Gasket Kits 7-9	A10-A12
Callialiate	B4-B8	Governor	B2-B10
Carburetor	B8 ·	Muffler	B12
CHOKE ENACED THE TELEVISION OF THE	A8	Shields	B10-B12
Connecting near the transfer	. A8	Oil Pan 1-1	A14
Claimone	A10-A12	Piston	. A8
Cylinder Brook	A10-A12	PTO Clutch	' B14
Cyllinder 11000 17.	E4-E10	Rotor, Ignition	B2
Electrical System	A10-A12	Spark Plug	E6-E8
	B12	Starter 57	· E4
2,41,445.	B6	Tank, Fuel	· B4
i ilegij Bradinar i i i i i i i i i i i i i i i i i i i	B4	Throttle Linkage	B8
Filter, Fuel	, 04	Valves	A10-A12
		Valves	,,,,
			•
• •	BASIC TRACT	OR SECTION .	,
	•	v	
Axle, Front	C12	Hydraulics :	D4-E2
Axle, Rear 41	D2 '	Adapter, Pump Drive 51	`D13
Baffles & Shrouds 21-23	B10-B12	Hoses, Lines & Fittings 43-55	D4-E2
Brakes	C.14	Motor, Hydraulic Drive 45	D6
Control, Speed	D14	Pump 51	D12
Decals	E12	Valve, Control 47	D8
Electrical System 57-63	E4-E10	Linkage, Valve, Control 53	D14
F27 Three Point Hitch Adapter . 75	F8	Hydraulic Lift 55	E2
Fenders	C6-C8	PTO (Hydraulic) 67-69	E14-F2
Frame	C2	Instruments 59-61	E6-E8
Grille	" C4	K22 and K24 Sleeve Hitch 71	″ F4
H13 Weight Box	F10	L11 Counterweight Kit 75	F8
H18 Counterweight Brackets 77	F10	Mounts, Engine : 27	C2
HFC34 Flow Control Valve Kit 81	F14	Mounts, Heat Exchanger 43-45	D4-D6
HFC34B Flow Control Valve Kit . 83	G2	PTO Clutch (electric) 25	B14
HH34 Three Point Hitch 73	F6	Reflector, rear	E10
HP30, HP40 Hydraulic PT0 67	E14	Seat, Operator's 31-33	C6-C8
HP42 Hydraulic PTO 69	F2	Steering Wheel & Gear 35	C10
Hitch, tow	D10	Tool Tray	C6-C8.
Hood	C4	Transmission 41	D2
	•	Wheels, Front & Rear 39	C14
		WW30, WW40 Wheel Weights . 79	. F12

#### **GENERAL INFORMATION**

#### INDEX

There is an index at the front and rear of this catalog.

The front index is an alphabetical index of the major groups or assemblies.

The rear index is a numerical index of the part numbers and pages on which these numbers are shown.

#### **ILLUSTRATION**

Each illustration in this catalog shows a group of parts or components. These parts and components are aligned approximately as the parts and components on your machine. Each part and component in an illustration has a reference number. These reference numbers are in a list on the page opposite of the illustration. Next to the reference number is the part number, description and required quanity of the part shown in the illustration.

UAR - "Use as required" indicates that the part quantity is variable.

NSS - "Not sold separately" indicates that the part is only available as a component of an assembly or the part must be purchased locally. If the part is an assembly component, the description will be indented under the assembly description in the parts list.

O/L - "Obtain locally"

\*\* - "Footnotes" are added to a part number when more information is needed for identification. They only relate to the part numbers indicated.

#### **PARTS ORDERS**

All orders must include the following information:

- Correct part number.
- 2. Complete description of part or component.
- 3. Total quantity of each part or component.
- 4. Product model number.
- 5. All necessary product identification numbers.
- 6. Method for sending the parts.
- 7. Complete and correct address.

#### **CATALOG REVISIONS**

As the product changes, new pages will be available for your catalog. A notice will be issued.

IMPORTANT: Put all revisions into the catalog as soon as possible.

# RIGHT HAND AND LEFT HAND IDENTIFICATION


The words right hand (RH) and left hand (LH) as used in this catalog indicate the direction while you are in the operator's seat in the normal operating position.


#### INDENTED DESCRIPTIONS

An assembly can have many components. The components of an assembly are indicated by an indented description. The quantity for an indented part is the total needed for that complete assembly. See the example.

REF.	PAR	T NO.	DESCRIPTION	REQ'D
	С	55159	CYLINDER ASSY - rear steering	neu D
28	C	56208	SOCKET ASSY - rear cylinder	1 ,
29	С	55956	PLUG - adjusting, socket assy	1
30	·C	55957	SEAT - socket ball	3
31	С	56210	SPRING - socket	1
32 °	С	56209	~ SEAT - socket spring	1
33	G.	45175	CLAMP ASSY - socket assy	1
	16~	836	BOLT - 1/2" x 2-1/4" N.F. hex	1
34	132-	104	PIN - cotter, 3/16" x 3"	, 1
35	С	55889	STUD - ball, socket & cylinder	2
36	13-	410	BOLT - 1/4" x 5/8" N.C., hex	4
37	92-	4	LOCK WASHER - 1/4" SAE	4
				•

#### PRODUCT IDENTIFICATION NUMBERS

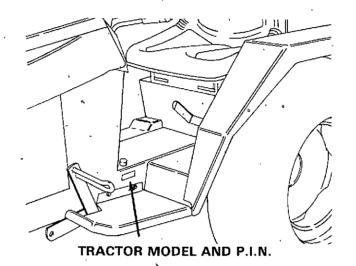

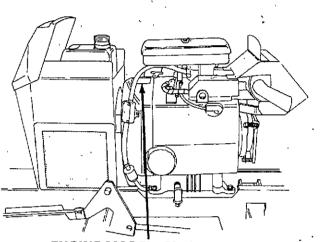

ENGINE MODEL, SERIAL AND SPECIFICATION NUMBERS

NOTE:

In this catalog there are references to serial numbers. To order the correct part use these serial numbers as a guide.

TRACTOR MODEL

ENGINE MODEL

3016, 4016

C33235 ONAN P216G-I

SPEC. NO. 10904B and 10904C

3018, 4018

C33236

ONAN P218G-I

SPEC. NO. 10904B and 10904C

3020, 4020

C33237


ONAN P220G-I SPEC. NO. 10904B and 10904C


#### PAINT

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 28849	BLACK - semi - gloss, 12 oz spray (2 per carton)	1
2	C 28850	BLACK - semi - gloss, quart (2 per carton)	. 1
3	C 28851	BLACK - semi - gloss, heat resistant, 12 oz spray (2 per carton)	1
4	C 28853	POWER TAN - 12 oz spray (2 per carton)	1
5 ·	C 28854	POWER TAN - quart (2 per carton)	1


# INGERSOLL Ingersoll Equipment Co., Inc.


#### PISTON, CRANKSHAFT, FLYWHEEL AND CAMSHAFT

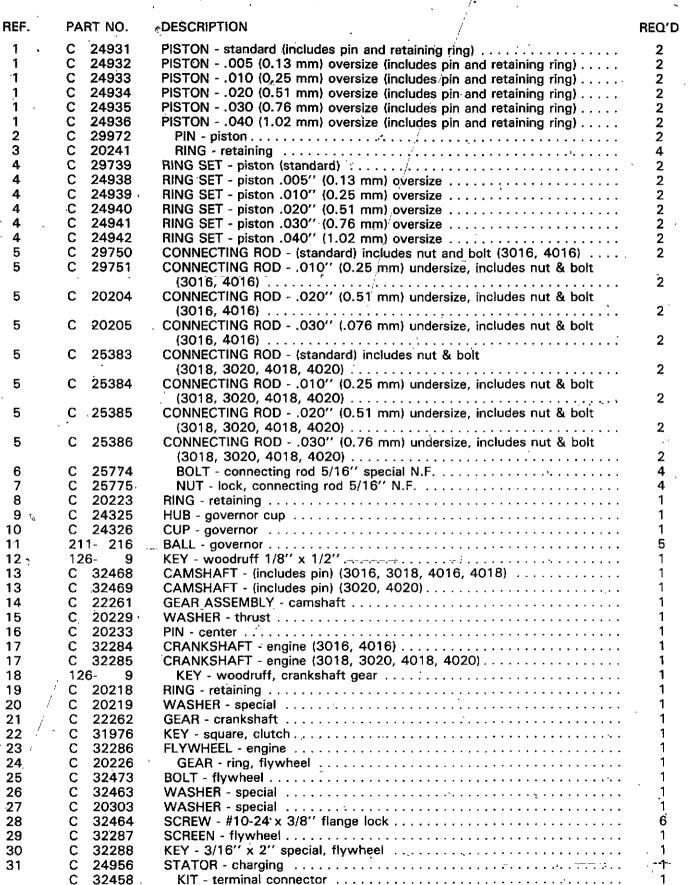

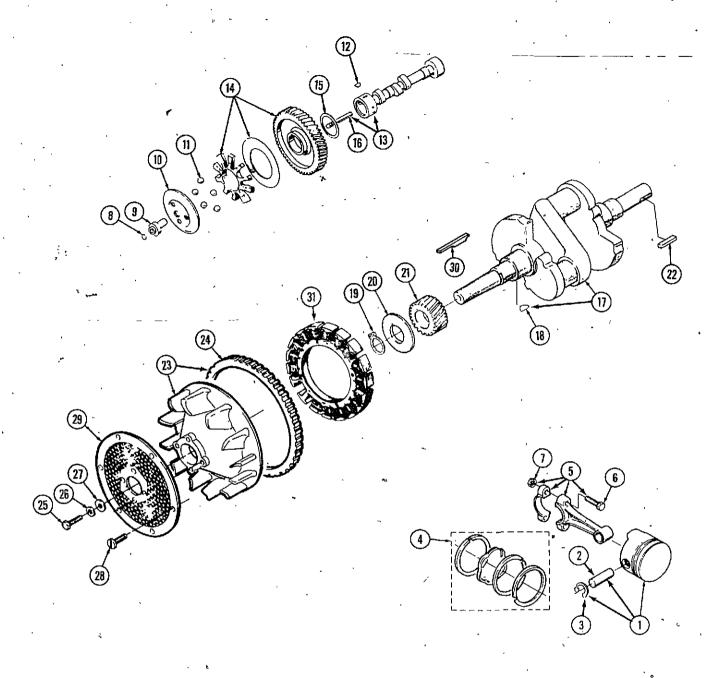


#### CYLINDER BLOCK

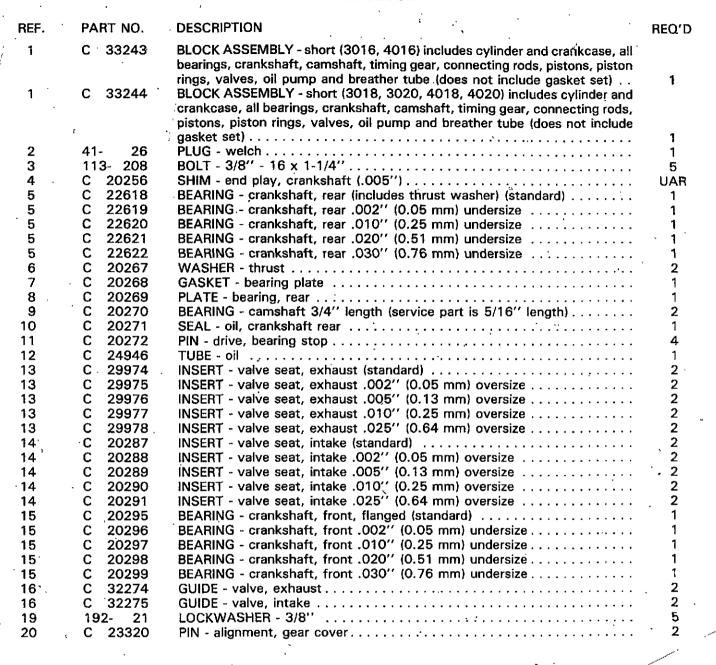

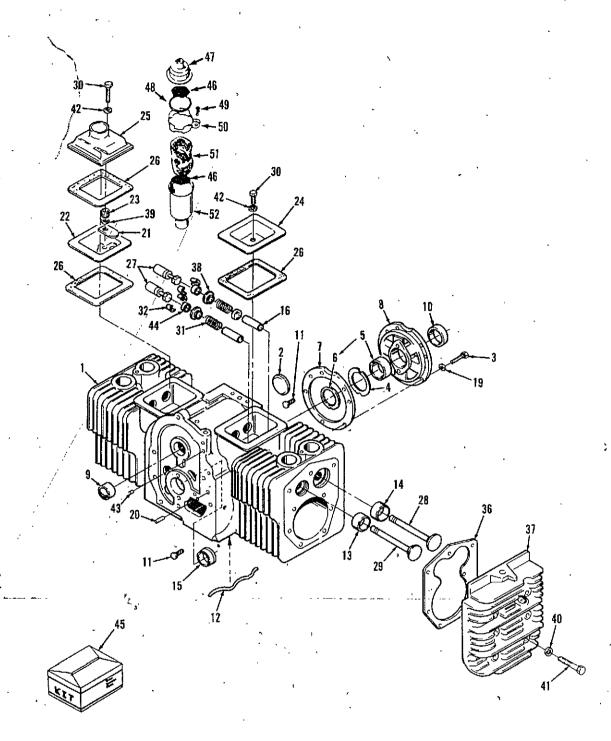

#### CYLINDER BLOCK

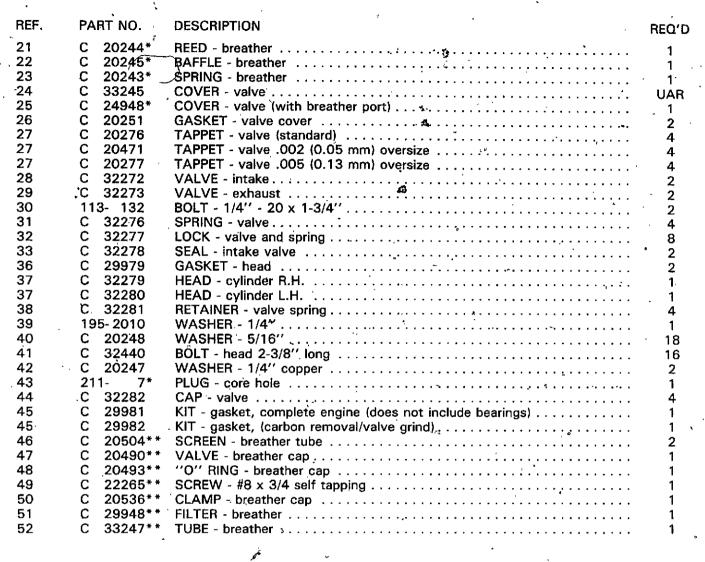

\*use before S/N:

\*\*use S/N and after:

3016 - 14127138

3018 - 14132690

3020 - 14133215


4016 - 14128811

4018 - 14129997

4020 - 14131216


January 1993

#### OIL BASE, PUMP, FILTER AND FILLER TUBE

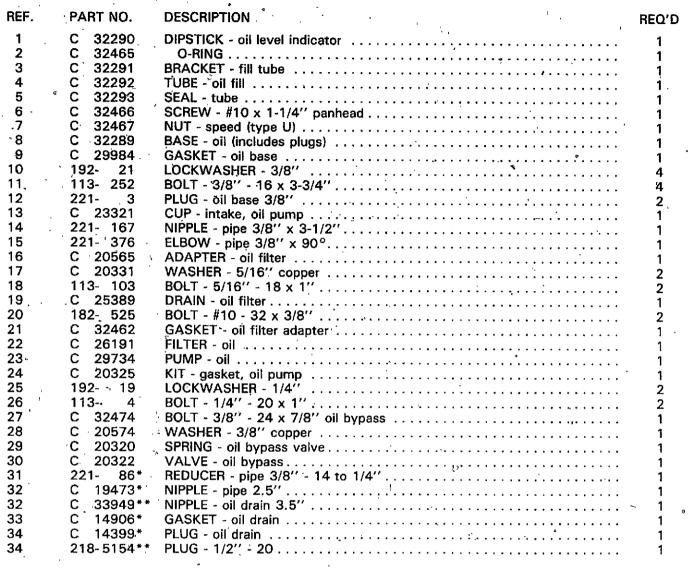


\*use on 4020 before PIN 14176500 3016, 3018, 3020, 4016, 4018 - All

\* \*use on 4020 PIN 14176500 and after

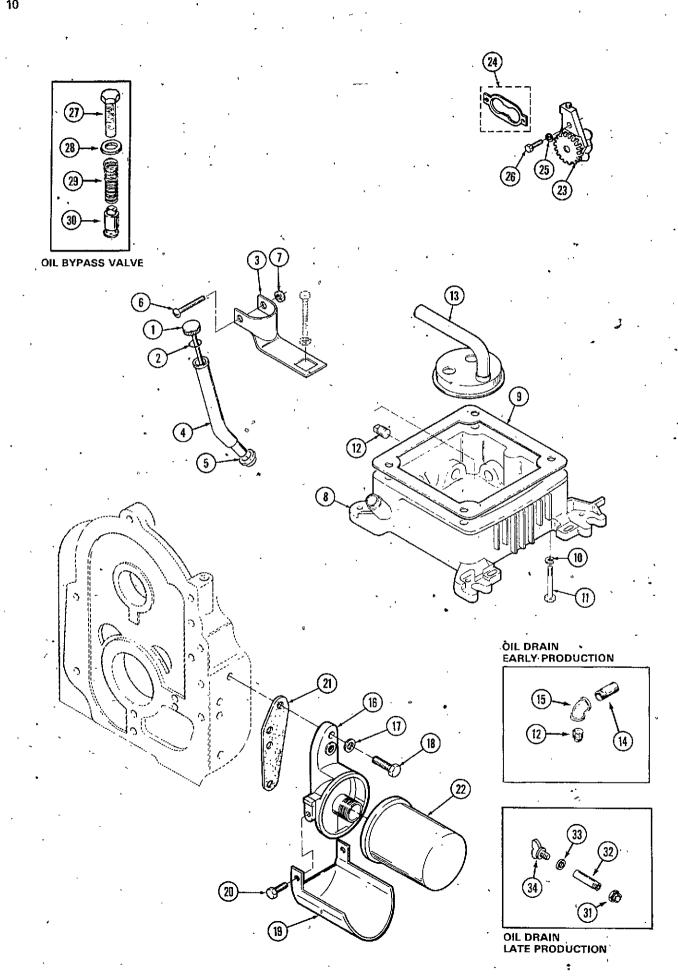



## **GOVERNOR GEARCASE AND IGNITION ROTOR**

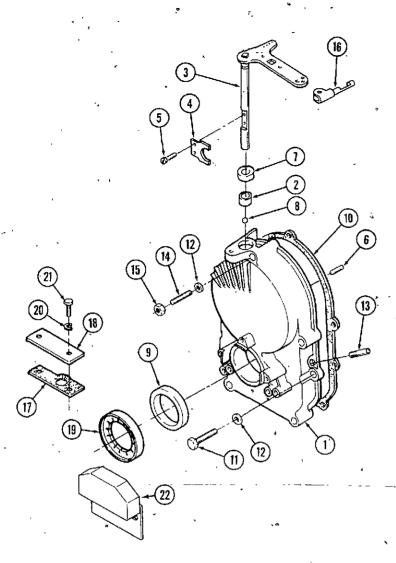


REF.	-	PART NO.	DESCRIPTION	REQ'I
: 1		C 32457	GEARCASE ASSEMBLY - governor	1
2		C 20305	BEARING - governor shaft	1
3		C 22632	SHAFT AND ARM	1
4		C 20307	YOKE - governor shaft	1
5		182-84	SCREW - #8 - 32 x 3/8"	2
6		C 20309	PIN - governor cup stop	1
7		C. 20310	SEAL - oil, governor shaft	1
8		211- 5	BALL - bearing, governor shaft	1
9		C 20312	SEAL - oil, crankshaft	. 1
10		C 20313	GASKET - mounting	1
11		113- 120	BOLT - 5/16" - 18 x 1-3/4"	4
12		C 20331	WASHER - 5/16" copper	5
13		C 20412	TUBE - vacuum port (included in assembly)	1
14		Ć 29985	STUD - gear cover	. 1
15		131- 911	NUT - 5/16" - 18	1
16	-	C 29989	CLIP - retaining	1
17		C 20345	GASKET - plate	1
18		C 32452	PLATE - plunger cover	1
19	~	c 32297	ROTOR - ignition	1
20		192- 19	LOCKWASHER - 1/4"	2
21		113- 2	BOLT - 1/4" - 20 x 5/8"	2
22		C 32294	CONTROL - ignition	1


#### FUEL SYSTEM (ENGINE)

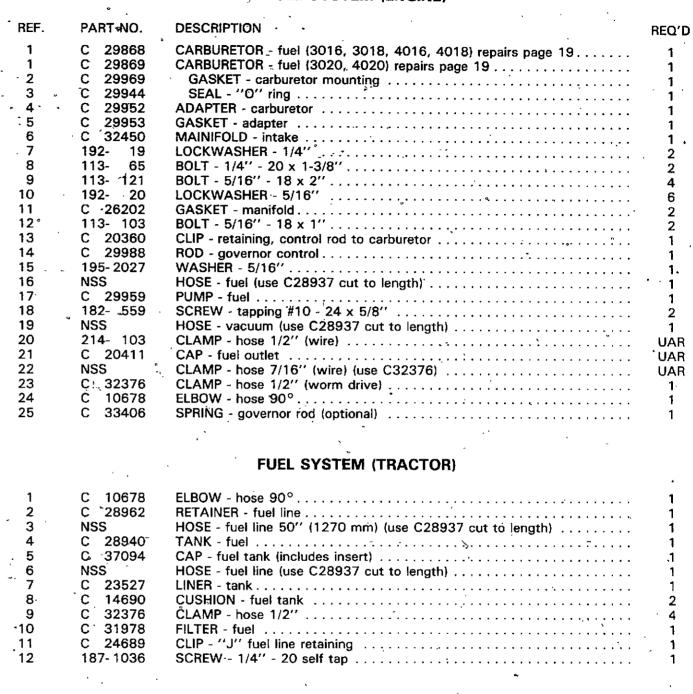

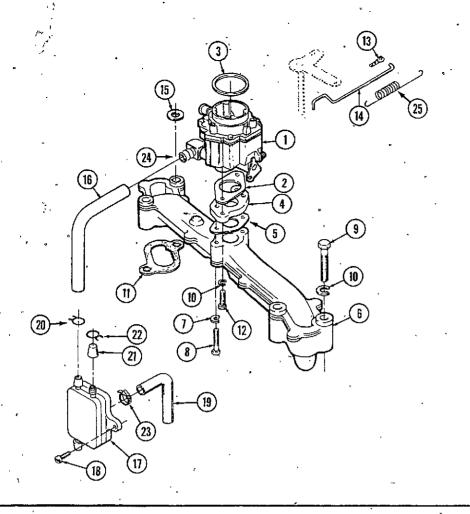

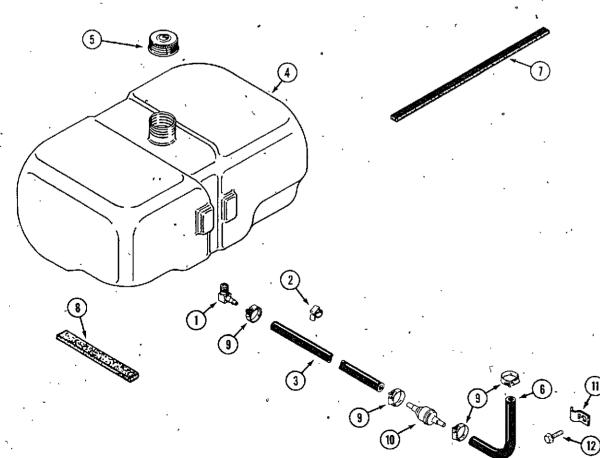


#### AIR CLEANER

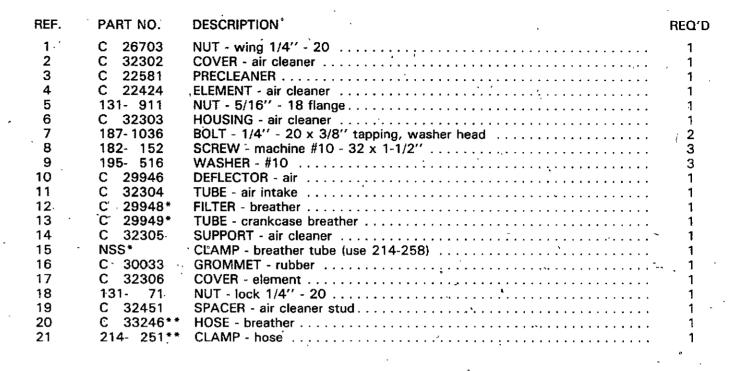


<sup>\*</sup>use before S/N:

3016 - 14127138 3018 - 14132690 3020 - 14133215 4016 - 14128811 4018 - 14129997 4020 - 14131216

<sup>\*\*</sup>use S/N and after:

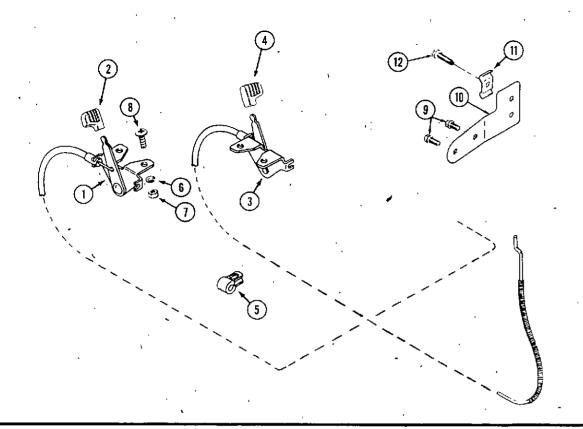

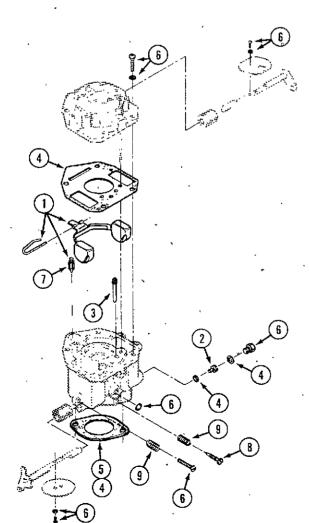

#### CHOKE AND THROTTLE -


REF.	PART NO.	DESCRIPTION	REQ'D
1	C 33414*	CONTROL - throttle	1
1	C 37226**		1
2	C 30073* -	HANDLE - throttle control, orange	1
2	C 35291**	HANDLE - control, black	1
3	C 31893*	CONTROL - choke	1.
3	C 37227**	CONTROL - choke	1
4	C 30074*	HANDLE - choke control, black	1
4	C 35291**	HANDLE - control, black	1
5,	C 31977	CLIP - cable (single cable) shown	2
5	C 33218	CLIP - cable (dual cable)	1
6	192 <u>'</u> 18	LOCKWASHER - No. 10 (early production)	2
٠ 7	C 34117	NUT - No. 10 - 24 flange lock	2
-8	182- 559	BOLT - No. 10 - 24 x 3/4" phillips, black	2
9	C 22369	BOLT - washer head #10 - 32 x 5/16"	2
10	C 29957	BRACKET - choke cable	1
11	C 29506	CLIP - retaining, choke cable	1
12	187-1511	SCREW - tapping #10 - 32 x 1/2"	1

\*use on 3016, 3018, 3020, 4016, 4018 - ail 4020 - before PIN 14176500

\*\*use on 4020 - PIN 14176500 and after

#### **CARBURETOR**


,	C 29868	CARBURETOR - fuel (3016, 3018, 4016, 4018)	1
•	C 29869	CARBURETOR - fuel (3020, 4020)	1
1	G 29965	KIT - float	1
2	C 29966	JET - power (3016, 3018, 4016, 4018)	1
2	C 30015	JET - power (3020, 4020)	1
3	C 29967	JET - idle	1 .
	. C 29962	KIT - repair	1
4	NSS	GASKET AND SEAL PACKAGE	1
. 5	C 29969	GASKET - mounting	1
6	NSS	SCREW AND PLUG PACKAGE	1
7 '	NSS	VALVE - inlet	1
8	NSS	VALVE - idle adjust	1
ā	NISS	SPRING - tension	2

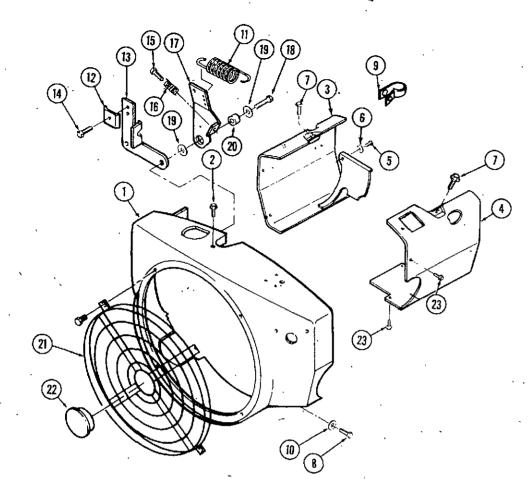


#### **BLOWER HOUSING AND GOVERNOR**

	•	· · · · · · · · · · · · · · · · · · ·	
1	C 32308	HOUSING - blower	1
2 ·	163- 22	SCREW - tapping, washerhead 1/4" - 20 x 7/16"	1.
3	C 32444	HOUSING - cylinder air L.H	1
4	C 32445	HOUSING - cylinder air R.H	1
5	187 <del>-</del> 1073	SCREW - tapping, washerhead 1/4" - 20 x 5/8"	2
6 <sup>°</sup>	195- 102	WASHER - 1/4"	2
, 7	C 32446	BOLT - 5/16" - 18 x 3/4" washerhead	2
8	187- 1073	SCREW - 1/4" - 20 x 5/8" tapping, washerhead	4.
9	C 32447	CLAMP - wire	1
10	195- 518	WASHER - 1/4"	4
11	C 20376	SPRING - governor	1
12	C 29506	CLAMP - cable	1
13	C 28719	BRACKET - cable	1
14	187- 1511	SCREW - tapping #10 - 32 x 1/2"	1
15	182- 49	SCREW - tapping #6 - 32 x 5/8"	1
16	C 20371	SPRING - idle setting	1
17	, C 32311	ARM - governor	1
18 ·	121- 3	BOLT - 1/4" - 20 x 1/2" washerhead	2
19	195- 102	WASHER - 1/4"	2
20	C 20375	BUSHING - arm, governer	1
21	NSS	SCREEN - blower housing (not used)	1
22	NSS	PLUG - screen (not used)	1
23	187-1036	BOLT - 1/4" - 20 x 1/2" flange lock	UAR


## EXHAUST PIPES AND COVERS

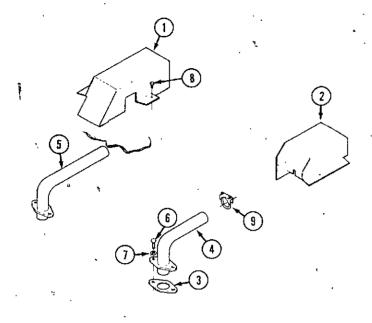

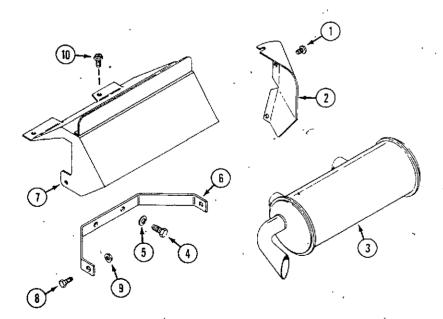

REF.	PART NO.	DESCRIPTION	REQ'D
1 2 3 4 5 6 7 8 9	C 32321 C 32322 C 26207 C 32324 C 32325 61- 512 192- 404 NSS C 31417 129- 102	COVER - exhaust pipe L.H.  COVER - exhaust pipe R.H.  GASKET - exhaust  PIPE - exhaust R.H.  PIPE - exhaust L.H.  BOLT - 5/16" x 5/8" socket head  LOCKWASHER - 5/16"  SCREW - 1/4" - 20 x 3/8" washerhead (use C31597)  CLAMP - exhaust  NUT - 5/16" - 18	1 1 2 1 1 4 4 2 2 2
•		MUFFLER AND SHIELDS	•
1 2 3 4 5 6 7 8 9	C 31597 C 31415 C 33425 113- 208 192- 21 C 31420 C 31421 113- 3 131- 934 187-1036 C 33028 121- 21 131- 934	SCREW - 1/4" - 20 x 1/2" black SHIELD - head baffle extension L.H. MUFFLER - exhaust BOLT - 3/8" - 16 x 1-1/4" LOCKWASHER - 3/8" STRAP - mounting SHIELD - muffler BOLT - 1/4" - 20 x 3/4" hex NUT - 1/4" - 20 flange lock SCREW - 1/4" - 20 x 1/2" self-tap KIT - exhaust deflector (optional) BOLT - 1/4" - 20 x 1/2" NUT - 1/4" flange lock	2 1 1 2 1 1 2 2 4 1 1

#### PTO ELECTRIC CLUTCH

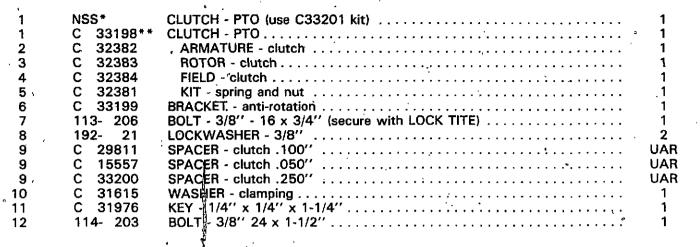


\*use before S/N:

3016 - 14126917 3018 - 14132580 3020 - 14133202 4016 - 14128593 4018 - 14129744 4020 - 14130984


<sup>\*\*</sup>use S/N and after:


# FRAME, FOOT PADS AND BELLY PAN

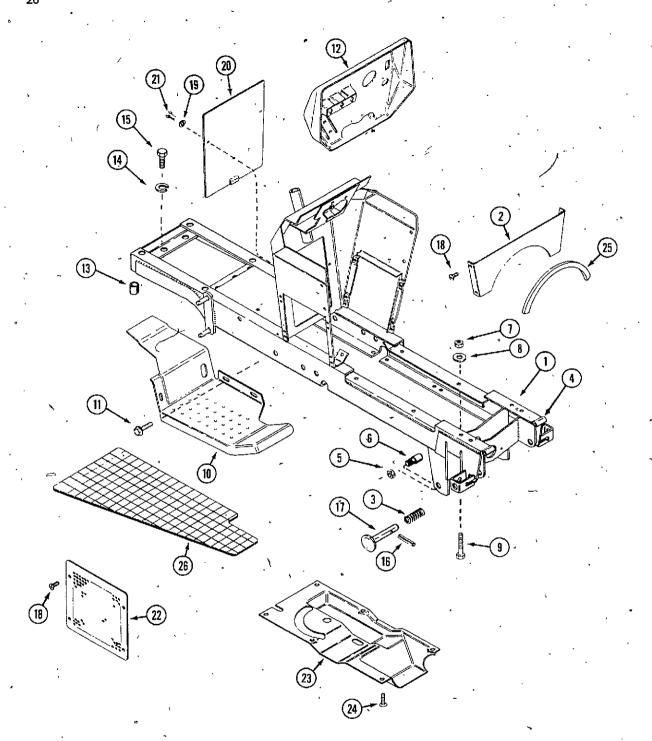

REF.	PART NO.	DESCRIPTION	REQ'D
1 ·	C 31625	FRAME - main (3016, 3018, 3020)	1
1	C 31627	FRAME - main (4016, 4018, 4020 before PIN 14176500)	i
1	C 43222	FRAME - main (4020 PIN 14176500 and after)	1
2	C 31610	SHIELD - oil tank	í.
3	C 24137	SPRING - latch	1
4	C 22023	HINGE - frame	2
5	131-1318	NUT - lock 1/2" N.F	2
6	C 27508	PIN - attachment	- <b>2</b> .
7	131-1352	NUT - lock 3/8" N.C. flange	4
8 .	195- 525	WASHER - 3/8" x 13/16" (over engine foot pad) early production	4
. 9	113- 208.	BOLT - 3/8" - 16 x 1-1/4"	4
10	C 30458	REST - foot L.H. (3016, 3018, 3020)	1
10	C 30460	REST - foot R.H. (3016, 3018, 3020) shown	1
10	C 30462	REST - foot L.H. (4016, 4018, 4020 before PIN 14176500)	1.
10	C 30464	REST - foot R.H. (4016, 4018, 4020 before PIN 14176500)	1
10	C 37136	REST - foot L.H. (4020 PIN 14176500 and after)	1
10	C 37138	REST - foot R.H. (4020 PIN 14176500 and after)	1
11	121- 106	BOLT - 5/16" x 1/2" N.C. flange lock	4
12	C 31368	CAP - instrument panel (on 4020 use before PIN 14176500)	4
12	C 37167	CAP - instrument panel (4020 PIN 14176500 and after)	1
12	C 31368	CAP instrument panel (3016, 3018, 3020, 4016, 4018)	1
ุ13	C 14730	SPACER - rear, frame (3016, 3018, 3020)	2
`1 <del>4</del>	192- 23	LOCKWASHER - 1/2"	. 4
15	113- 424	BOLT - 1/2" - 13 x-1" transaxle mounting	UAR
15	166- 85	BOLT - 1/2" x 1", 12 pt. flange	UAR
16	138-2073 〔	PIN - roll 3/16" x 1-1/4"	2
17	C· 16373	PIN - latch	2
18	C 31597	BOLT - 1/4" - 20 x 1/2" black	12
19	192 19	LOCKWASHER - 1/4"	2
20	C 31359	COVER - access	1.
21	187- 1036 ·	SCREW - 1/4" - 20 x 1/2" self tap	2
22	C 31967	SCREW - tower side	2
23	C 31369	PAN - belly	1
24	C 31603	RETAINER - belly pan	6 `
25	C ' 33472	SEAL - engine air (4020 PIN 14176500 and after)	1
26	C 37140	PAD - footrest L.H. (4020 PIN 14176500 and after)	1
26	°C 37141	PAD - footrest R.H. (4020 PIN 14176500 and after)	1



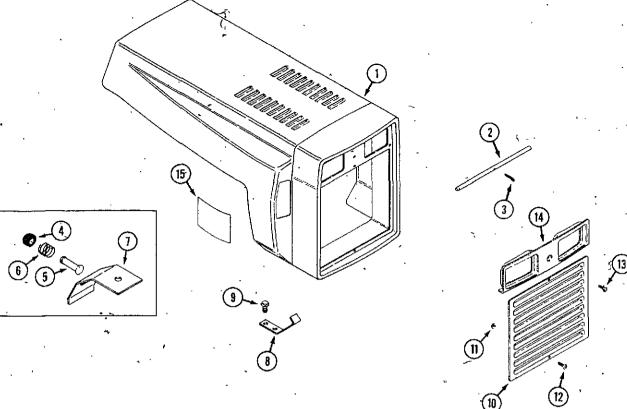


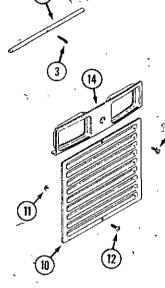

#### HOOD AND GRILLE


PART NO.	DESCRIPTION	REQ'D
C 31353	HOOD	1
C 31357		1
C 16362	ROD - hood hinge	1
132- 334	PIN - cotter 1/8" x 3/4"	1
C 29314	BUTTON - push, hood release	<sup>-</sup> 1
C 30126	ROD - push, hood release	1
C 30004	SPRING - release	1
C 33467	LATCH - hood	1º
C 31611		2
121- 106	BOLT - 5/16" - 18 x 1/2" flange lock	4
C 31365	GRILLE	1
131- 934	NUT - 1/4" - 20 flange lock	. 2·
C 31597	SCREW - 1/4" - 20 x 1/2" black	2
187-1328		1
C 31366	SHROUD - headlight	1
C 31612	SHIELD - heat	1
	C 31353 C 31357 C 16362 132- 334 C 29314 C 30126 C 30004 C 33467 C 31611 121- 106 C 31365 131- 934 C 31597 187-1328 C 31366	C 31353 HOOD C 31357 HINGE - hood (not shown) is welded to hood C 16362 ROD - hood hinge 132- 334 PIN - cotter 1/8" x 3/4" C 29314 BUTTON - push, hood release C 30126 ROD - push, hood release C 30004 SPRING - release C 33467 LATCH - hood C 31611 BRACKET - hood stop 121- 106 BOLT - 5/16" - 18 x 1/2" flange lock C 31365 GRILLE 131- 934 NUT - 1/4" - 20 flange lock C 31597 SCREW - 1/4" - 20 x 1/2" black 187-1328 SCREW - #8 - 18 x 3/8" C 31366 SHROUD - headlight

#### SEAT, FENDERS AND TOOL TRAY 3016, 3018, 3020, 4016, 4018 - ALL

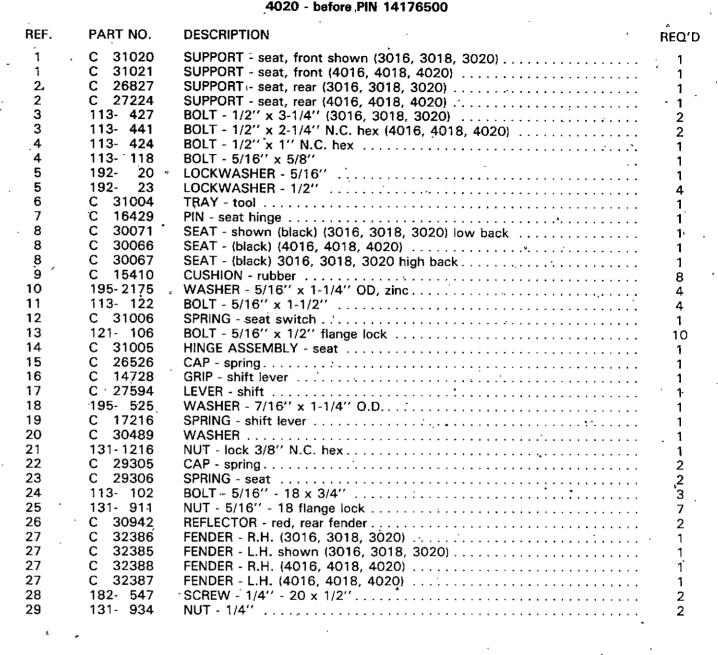






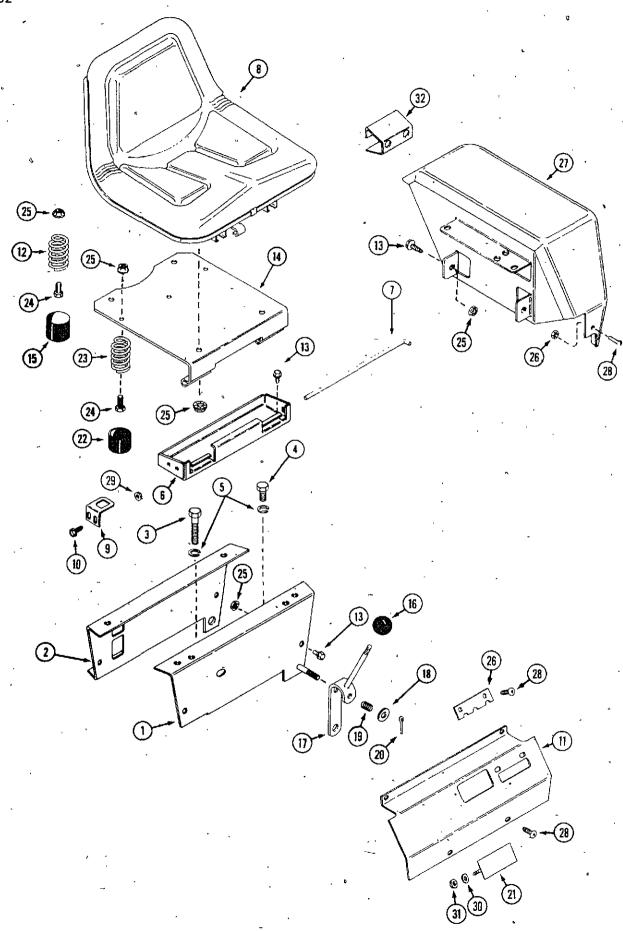

#### SEAT, FENDER AND TOOL TRAY 4020 - PIN 14176500 AND AFTER

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 37262	SUPPORT - seat, front	1.
2	C 37266	SUPPORT - seat, rear	1
3	113- 441	BOLT - 1/2" x 2-1/4"	2 .
4	113- 424	BOLT - 1/2" x 1" N.C. hex	1
4	113- 118	BOLT - 5/16" x 5/8"	1
5	192- 20	LOCKWASHER - 5/16"	1
5	192- 23	LOCKWASHER - 1/2"	4
6	C 37017	TRAY - tool	1
7	C 16429	PIN - seat hinge	1.
8	C 37151	SEAT - operator's	1
9 .	C 37060	BRACKET - switch mounting	1
10	113- 2	BOLT - 1/4" - 20 x 5/8"	2.
11	C 37411	COVER - shift lever	1
12	G 37462	SPRING - seat switch	1
13	121- 106	BOLT - 5/16" x 1/2" flange lock	10
14	C 37152	'HINGE ASSEMBLY - seat	` 1
15	C 26526	CAP - spring	1
16	C 10487	KNOB - shift lever	~ 1 :
17	C 37247	LEVER - shift	1
18	195- 525	WASHER - 7/16" x 1-1/4" O.D	1 .
19	C 10482	SPRING - shift lever	1
20	132- 310	*PIN - cotter 1/8" x 1"	' 1
21	C 37460	COVER - plate	
22	C 29305	CAP - spring	2
23	C 29306	SPRING - seat	2
24	113- 102	BOLT - 5/16" - 18 x 3/4"	` 3
25	131- 911	NUT - 5½16" - 18 flange lock	11
26	C 37430	PLATE - shift pattern	1
27	C 37156	FENDER - R.H	1
27	C 37155	FENDER - L.H :	1
28	C 31597	SCREW - 1/4" - 20 x 1/2"	6
29	131- 934	NUT - 1/4"	6
30	195-2175	WASHER - flat	2
31	. 131- 934	NUT - 1/4" - 20 flange lock	2
32	C 42155	PROTECTOR - tail light	2
		9	•

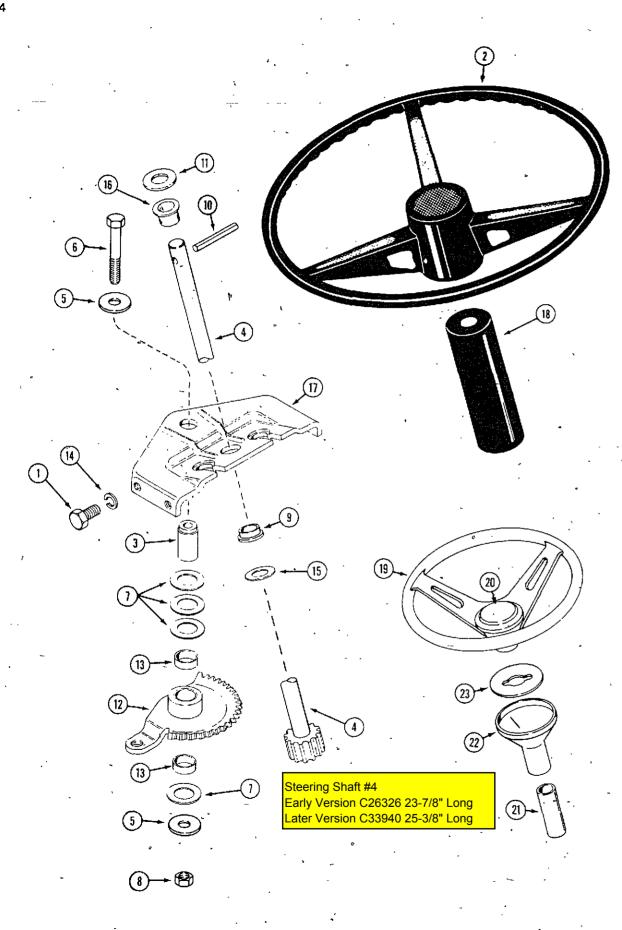


#### STEERING GEAR

•		•	
REF.	PART NO.	DESCRIPTION	REQ'D
1	113- 206	BOLT - 3/8" x 3/4" N.C. hex	4
2	C 26325*	WHEEL - steering	1
3	C 29044	PIN - pivot	1
4	C 26326	SHAFT - steering	1
5	C 29812	WASHER - 3/8" x 1.4"	2
6	113- 241	BOLT - 3/8" - 16 x 3"	1
7	C 14201	WASHER - shim	4
8	131-1352	NUT - 3/8" - 16 hex lock flange	1
9	C 27501	BUSHING	1 .
10	138- 143	PIN - roll 1/4" x 2-1/4"	1
11	195- 541	WASHER - 5/8"	UAR
11	195- 2206	WASHER - 5/8" x 1-1/4" x .06	UAR
12	C 33309	GEAR - steering	1 .
13	C 33308	BUSHING - sleeve	2
14	192- 21	LOCKWASHER - 3/8"	. 4
`15	195- 2069	WASHER - 5/8" zinc plated	1
16	C 15096°	BUSHING - flanged nylon'	1
17	C 30019	SUPPORT - steering gear (includes item 9)	1 '
18	C 30127*	TUBE - steering	1
19	C 37131**	WHEEL - steering	1
20	C 42849**	CAP - steering wheel	1
21	C 37479**	TUBE - steering	1
22	C 39504**	BOOT - steering column	1
23	C .39507**	INSERT - boot	1.

\*Use on: 3016, 3018, 3020, 4016, 4018 - ALL 4020 - before PIN 14176500


\*\*Use on: 4020 - PIN 14176500 and After

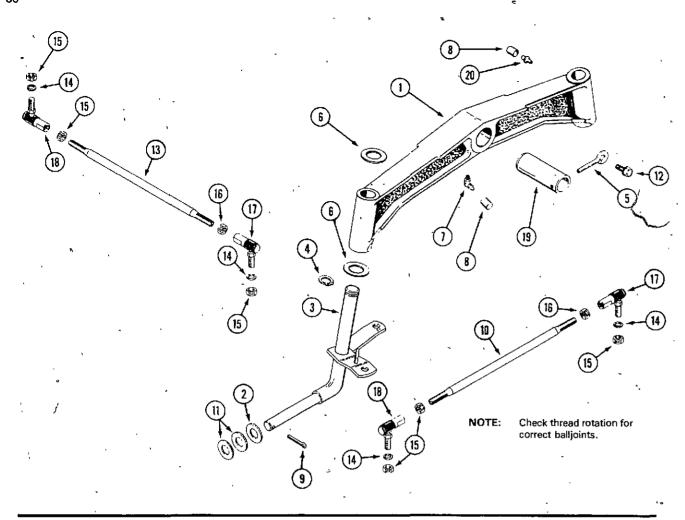



## FRONT AXLE

REF.	PART NO.	DESCRIPTION	REQ'D
1	· C 18812	AXLE - front (3016, 3018, 3020)	1
1	C 40687	AXLE - front shown (4016, 4018, 4020)	i
2	C 27597	WASHER - spacer	ż
3	C 31338	SPINDLE - R.H. (3016, 3018, 3020)	ī
3	C 31341	SPINDLE - R.H. shown (4016, 4018, 4020)	i
3	C 31337	SPINDLE - L.H. (3016, 3018, 3020)	· i
ã	C 31340	SPINDLE - L.H. (4016, 4018, 4020)	i
4	C 27902	RING - retaining, spindle (4016, 4018, 4020)	2
4	C 28232	RING - retaining, spindle (3016, 3018, 3020)	- 2/
5	C 22278	PIN - retaining, axle pivot	• 7
6	C 11906	WASHER - thrust (3016, 3018, 3020)	Žą.
6	C 13716	WASHER - thrust (4016, 4018, 4020)	4
7	219- 404	FITTING - lubrication	3
8	C 13106	COVER - lubrication fitting	3
9	132- 311	PIN - cotter 5/32" x 1-1/4"	2
10	C 25855	TIE ROD - (4016, 4018, 4020)	1
10	C 25856	TIE ROD - (3016, 3018, 3020)	1
11 ີ	C 28226	WASHER - wheel spacer	UAR
12	187-1910	BOLT - 3/8" - 16 x 3/4" N.C. hex head	. 1
13	C 25857	LINK - drag	° 1 -
14	192- 23	LOCKWASHER - 1/2" zinc	4
15	129~ 165	NUT - 1/2" N.F.R.H. thread, lock	6
16	126- 365	NUT - 1/2" N.F.L.H. thread, lock	2 -
17	C 13605	BALLJOINT - 1/2" L.H. thread	2
18,	° C 12102	BALLJOINT - 1/2" R.H. thread	- 2
19	C 22568	PIN - axle pivot	1 .
20	219- 17	FITTING - lubrication	2

#### **BRAKE ASSEMBLY**

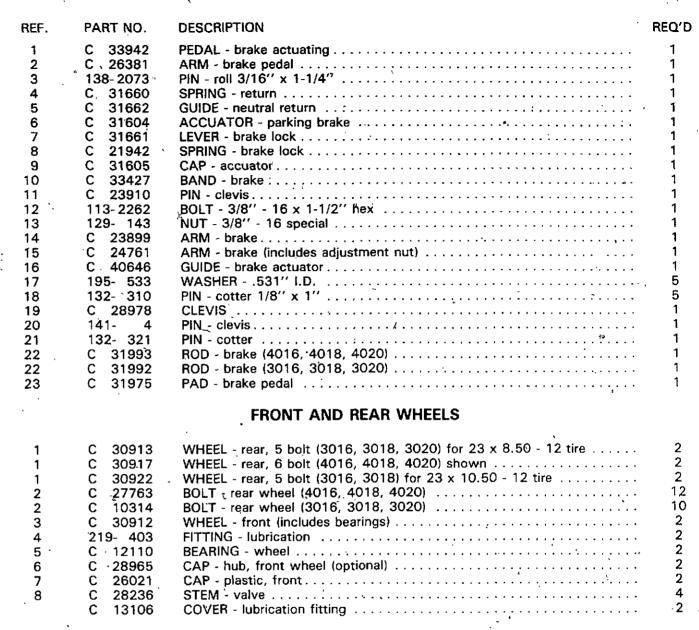

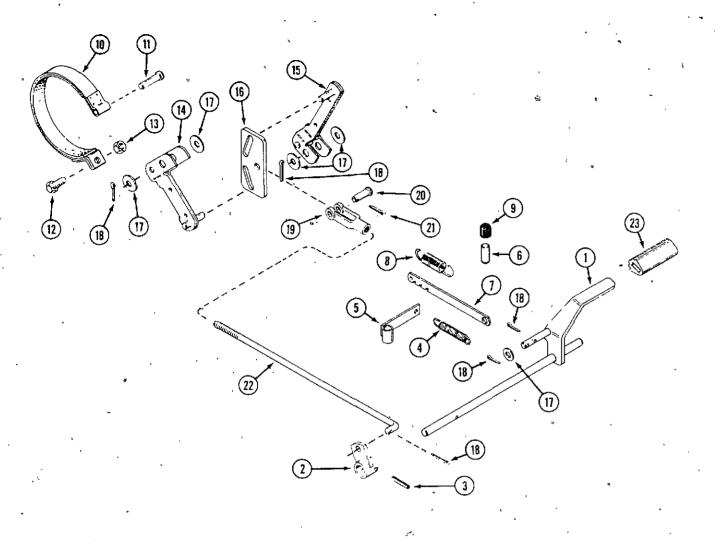

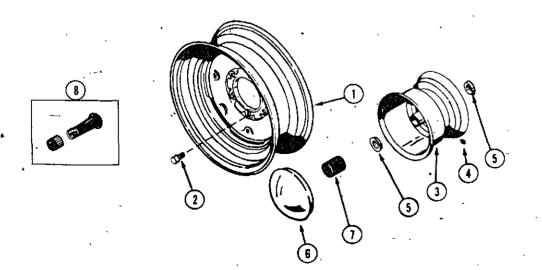

#### TRANSMISSION AND FINAL DRIVE

\*Use on: '3016, '3018, '3020, '4016', '4018 - ALL' 4020 - before PIN 14176500

\*\*Use on: 4020 - PIN 14176500 and after

#### HYDRAULIC SYSTEM


# 3016, 3018, 3020, 4016, 4018 - ALL 4020 - before PIN 14176500


REF:	PART NO.	DESCRIPTION	REQ'D
1	C 29689	VALVE - control (repairs page 47)	<sup>'</sup> 1
<sup>°</sup> 2	2185065	FITTING - 3/4" x 7/8" "O" ring	1
3	218-5007	"O" RING	1 "
4	218-5107	FITTING - 90° elbow	2 ~
, 5 `	218-5007	"O" RING	1
· 6	218-5062	FITTING - 5/8" x 7/8" "O" ring	3
7	218-5007	"O" RING	1
8	218-5232	FITTING - 90° elbow	1
9	C 27764	SCREW - 5/16" - 18 x 1-1/4" round head	2
10	131- 351	NUT - lock 5/16"	2
11	C 29655	TUBE - valve to upper motor port (3016, 3018, 3020)	1
11 -	C 29657	TUBE - valve to upper motor port (4016, 4018, 4020)	1
12	C 29656	TUBE - valve to lower motor port (3016, 3018; 3020)	1
·12	C 29658	TUBE - valve to lower motor port (4016, 4018, 4020)	1
13	C 31435*	TUBE - valve "out" to heat exchanger	.1.
14	C 30939	MOTOR - hydraulic (3016, 3018, 3020) (repairs page 49)	1
14	C 33234	MOTOR - hydraulic (4016, 4018, 4020) (repiars page 49)	1
15	C 28949	SEAL - motor to transmission	1
16	166- 85	SCREW - 1/2" - 18 x 1" 12 pt. flange	4
17	C 31958	PUMP - hydraulic 1/2" shaft (repairs page 51)	1
18	C 33423	HOSE - pump inlet	1
19	C 33180	RESERVOIR - oil	1
- 20	C 25237	CAP - reservoir	1
·21	C 31295	EXCHANGER - heat	. i
22	C 31431	HOSE - formed 90° 6-3/4" x 6-3/4" (cut to length)	2
23	214- 254	CLAMP - hose 1-1/4"	4
24	214- 14	CLAMP - hose 1-3/8"	2
.25	C 31966	HOSE - pump to valve	1
26	218-5117	FITTING - 90° elbow	i
.27	C 31973	"J" NUT - 1/4" - 20	4
28	C 31974	"U" Clip - retainer	4
29	NSS**	HOSE - hydraulic (use C29697 cut to length)	1
30	218- 754	CAP - hydraulic nut	1
31	C 33155**	TUBE - valve "out" to heat exchanger	1
<b>J.</b>	_ 00.00		•
		• • • • • • • • • • • • • • • • • • • •	


3016 - 14137800 to 14147800 3018 - 14138800 3020 - 14133220 4016 - 14139600 to 14149628 4018 - 14140900 4020 - 14141900

<sup>\*\*</sup>Use before PIN: \*\*Use PIN and after:


#### HYDRAULIC SYSTEM 4020 - PIN 14176500 and after

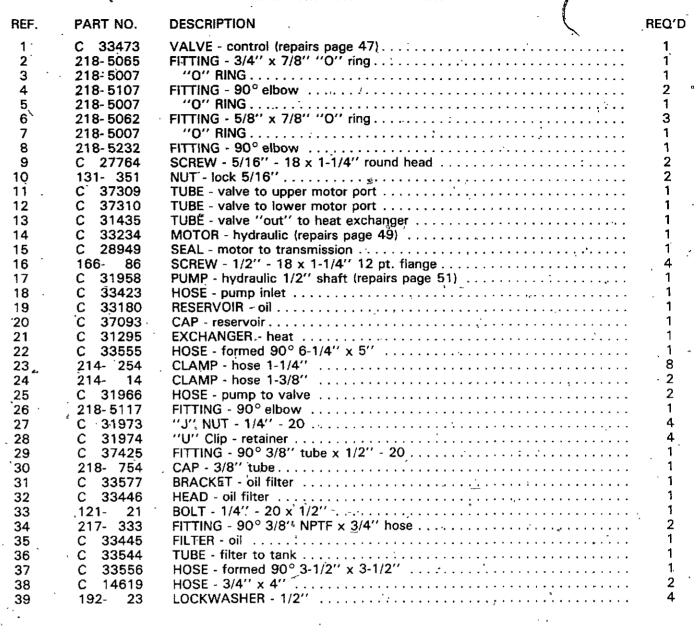

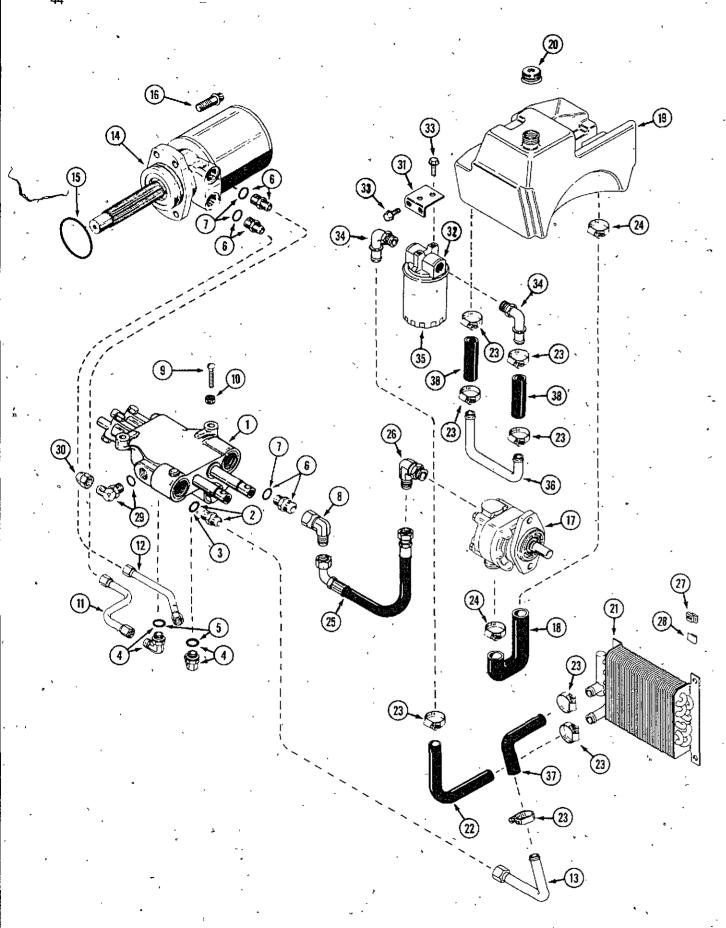


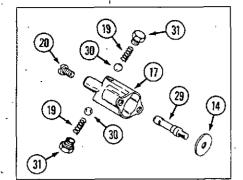


TRAVEL SECTION DETENT GROUP

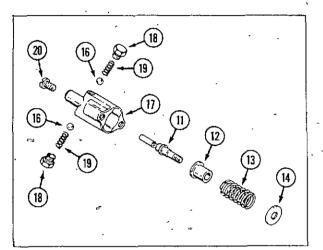


LIFT SECTION DETENT GROUP

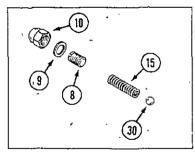


LIFT SECTION RELIEF GROUP

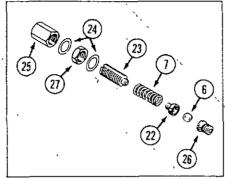

TRAVEL SECTION RELIEF GROUP,

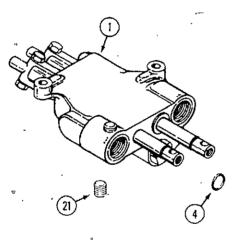


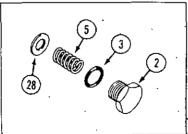


HOLDING SECTION GROUP

#### HYDRAULIC CONTROL VALVE

,			
REF.	PART NO.	DESCRIPTION	REQ'D
1	C 29689	VALVE - control, two spool	1
2	C 29956	CAP - end	2
3	C 28217	"O" RING - end cap	1
4	C 28856	SEAL - spool	4
5	C 29951	SPRING - centering	2
6	211- 208	BALL - steel 5/16" (7.94 mm)	1
7	C 21507	SPRING - relief	2
8	C 17433	SCREW - relief adjust	1
g ·	C 17435	GASKET - relief adjust cap	1
10	129- 531	CAP - adjust screw	2
11	C 26668	DETENT - spool	1
12	C 28707	SPACER - detent	1
13	C 28706	SPRING - detent return	1
14	C 28705	WASHER - return	2
15	NSS	SPRING - relief (use C21511 relief kit)	1
16	211- 5	BALL - steel 3/16" (4.76 mm)	2
17	C 17438	COVER - detent	1
18	C 28708	SCREW - detent	2
19	C 17444	SPRING - detent	4
20	169- 114	SCREW - cover	4
21	221- 841	PLUG - pipe	1
-22	C 21506	RETAINER - ball seat	
23	C 26665	SCREW - adjust, relief	1
- 24	C 26664		1
25	C 26666	GASKET - adjust cap	1
	C 26663		· 1
26	129- 166	SEAT - relief ball	1
27	-	NUT - lock	۱ ۲
28	C 29950	WASHER - spring retaining	2 <sup>-</sup> 1
29	C 29958	DETENT - spool	•
30	211- 7	/ BALL - steel 1/4" (6:35 mm)	2
31	C 17443	SCREW - detent	2
	C 30002	KIT - seal	1

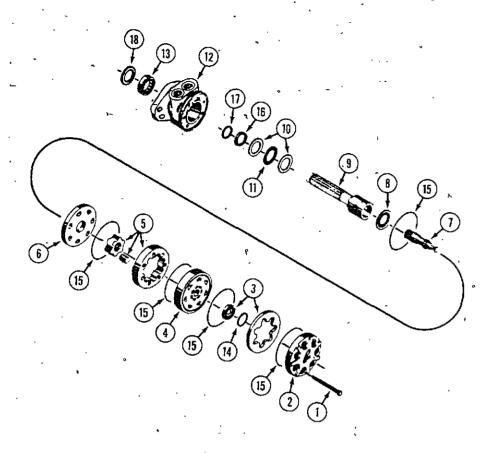


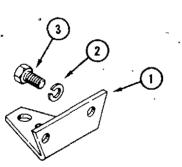


#### HYDRAULIC DRIVE MOTOR

REF. PART NO.	DESCRIPTION	1 4	REQ'I
REF. PART NO.  C 33234 C 30939 1 28- 668 1 C 31327 2 C 31309 3 C 31310 4 C 31311 5 C 31312 5 C 31313 6 C 31314 7 C 31315 7 C 31316 8 C 31317 9 C 31318 10 C 31320 11 C 31322	DESCRIPTION  MOTOR - hydraulic (4016, 4018, 4020)  MOTOR - hydraulic (3016, 3018, 3020)  BOLT - 3/8" - 24 x 4-1/4" (3016, 3018, 3020)  BOLT - 3/8" - 24 x 4-5/8" (4016, 4018, 4020)  COVER - end  COMMUTATOR AND RING SET  MANIFOLD  ROTOR ASSEMBLY (3016, 3018, 3020)  ROTOR ASSEMBLY (4016, 4018, 4020)  PLATE - wear  LINK - drive (3016, 3018, 3020)  LINK - drive (4016, 4018, 4020)  BEARING - thrust  SHAFT - coupling  WASHER - thrust  BEARING - drive end  BEARING - outer	))	1 1 7 7 1 1 1 1 1 1 1 7 2 1
C 31323 14 NSS 15 NSS 16 NSS 17 NSS 18 NSS	KIT - seal		1 5 1 1
	DRAWBAR AND TOW HITCH		
1 C 13360 2 192- 23 - 3 113- 424	DRAWBAR		1 . 2 2

#### HYDRAULIC PUMP (PARKER-HANNIFIN)

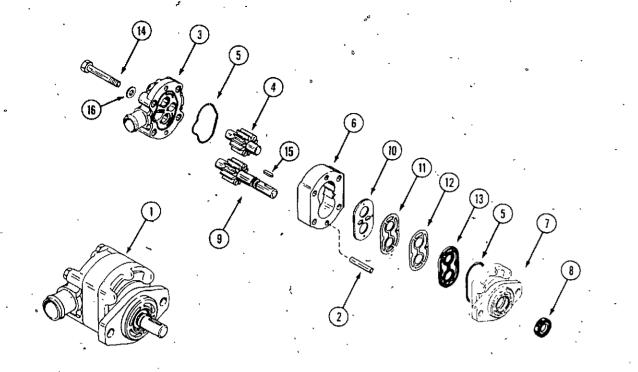

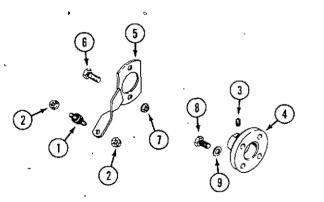

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 31958	PUMP - hydraulic 1/2" shaft	1
2	F 53109	PIN - dowel	2
3	C 31987	COVER - rear	1
4	· C 15731	GEAR ASSEMBLY - driven :	ì
5.	C 15732	"O" RING - cover	ż
6	- C 15733	BODY - pump	1
7	°C 15734	COVER - front	1
8	C 15735	SEAL - shaft	1
9 .	~ NSS	GEAR ASSEMBLY - drive (1/2" shaft) (use C31958)	1
10	C 15737	PLATE - wear	1
11	· C 15738	SHIELD - heat	1
12	C 15739	GASKET	1
13	. C 15740	SEAL	1
14	113- 111	BOLT	,4
15	€ 31988	KEY - 1/8" square x 3/4" long (1.587, mm x 19.05 mm)	1
16	C. 19115	WASHER	4
•	•		
à	•	PUMP MOUNTING COMPONENTS	
		`	

NUT - 5/16" -18 flange lock ......

SCREW - set 5/16" - 18 x 5/16" socket (use loctite)

ADAPTER - drive

PLATE - pump torque arm (use C33506)

BOLT - 3/8" - 16 x 1-1/4" hex


NUT - 3/8" - 16 flange lock


BOLT - 5/16" - 18 x 1" hex

LOCKWASHER - 5/16" .....

131- 911 83- 55

C 31964 NSS 113- 208 131-1352 113- 103 192- 20

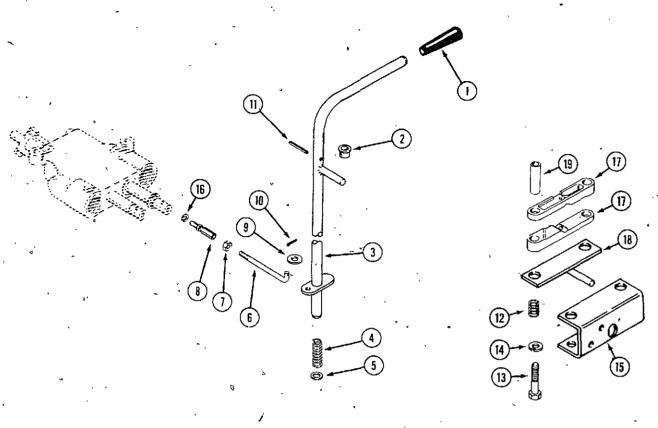

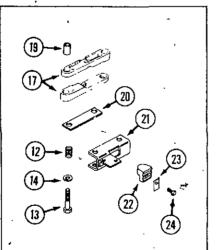

#### SPEED CONTROL

,	REF.	PART NO.	DESCRIPTION	QTY.
	1 '	C 29047	KNOB - speed control	1
	2	C 29636	BUSHING - lever	1
	3,	C 32509+	LEVER - speed control (shown)	*1
	3´	ે  C 37250ુ+ +	LEVER - speed control	1
	4	. C 10482	SPRING - compression	1
	5	C 21518	WASHER - nýlon	· 1
	6	C 31670*	ROD - control	1
	7	129- 122	NUT - 5/16" N.F. hex, zinc plated	1
	8 .	C 19025*	JOINT - ball	1
	9	NSS	WASHER - 5/16" (not required)	1
	10	132- 320	PIN - cotter 3/32" x 3/4"	-1
	11	138-2072	PIN - roll 1/8" x 1-3/4"	1
	12	C 30827	SPRING - locator	2
	13	113- 14	BOLT - 1/4" 20 x 2"	2
	14	192- 19	LOCKWASHER - 1/4"	2
	15	C 31678	CARRIER - locator	1
	16	192- 20 ·	LOCKWASHER - 5/16"	1
	17	C 32362	LOCATOR - half	2.
	18	C 31674	ACCUATOR - switch	1
•	19	C 29653	SPACER - tube	2
	20	C 37254	SUPPORT - locator	1
	21	C 37255	CARRIER - locator	1
	22	C 37198	CAM - switch:	1
	23	C 44029	RETAINER - switch lever	1
	24	187- 1328	SCREW - #8 - 18 x 3/8"	1
		•		

\* order both C31670 rod + C19025 joint if other than illustrated or if tractor is between the following S/N:

3016 - 14126892 to 14126985 3018 - 14132566 to 14132607 3020 - not affected

4016 - 14128552 to 14128650 4018 - 14129714 to 14129813 4020 - 14130956 to 14131047

+ use on

3016, 3018, 3020, 4016, 4018 - All 4020 - before PIN 14176500

++ use on

4020 - PIN 14176500 and after

#### **HYDRAULIC LIFT**

REF.	PART NO.	DESCRIPTION	REQ'D. "
1	C 32259	SHAFT ASSEMBLY - lift	· 1
2	219- 17	FITTING - lubrication	
3	C 29693	PIN - cylinder to lever, clevis	
4	132- 310	PIN - cotter 1/8" x 1"	<b>'</b> 5
5	C 17734	HOSE - long	1
6	C 17249	BRACKET - mounting, top	2
7	.C 17250	BRACKET - mounting, bottom	2
8	192- 20	LOCKWASHER - 5/16"	1
9	NSS	BRACKET - cylinder (use C33138 kit)	`1
10	C 33491+	LEVER - lift control shown	1
10	C 33956++	LEVER - lift control	1 .
11	C 29045	KNOB - control lever	1
12	C 29636	BUSHING - lift lever	1
13	132- 320	PIN - cotter 3/32" x 3/4"	
14	195- 533	WASHER - 1/2"	
15	C 21518	*WASHER - nylon	,
16	C 31681	SPRING - control lever	
17	195- 521	WASHER - 5/16"	1
18	C 31670*	ROD - control	
19	129- 122	NUT - 5/16" N.F. hex	
20	C 19025*	BALLJOINT	
21	113- 209	BOLT - 3/8" x 1-1/2" N.C. hex	
22	131- 938 👵	NUT - lock 3/8" N.C. hex flange	
23	195- 104	WASHER - 3/8" x 1-1/8" O.D	
25 <sup>-</sup>	C 26188	PIN - cylinder base	
26	218- 1093	FITTING - hydraulic 45° elbow	, 1
27	218-5056	FITTING - yalve (includes 218-5004 "O" ring)	2 -
	. C 31682	HOSE - short	
29	C 27590	CYLINDER - lift	
	· C 30054	KIT - seal	
30	C 13106	COVER - lubrication fitting	. 1
	•		


\* order both C31670 rod and C19025 joint if other than illustrated or if tractor is between the following S/N:


3016 - 14126892 to 14126985 3018 - 14132566 to 14132607 - 3020 - not affected 4016 - 14128552 to 14128650 4018 - 14129714 to 14129813 4020 - 14130956 to 14131047

+ use on: 3016; 3018, 3020, 4016, 4018 - All 4020 - before PIN 14176500


++ use on; 4020 - PIN 14176500 and after

## STARTER

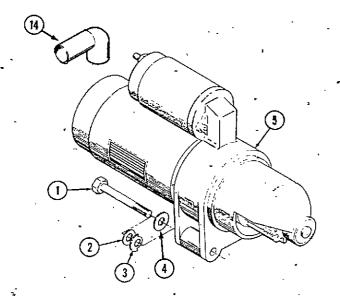

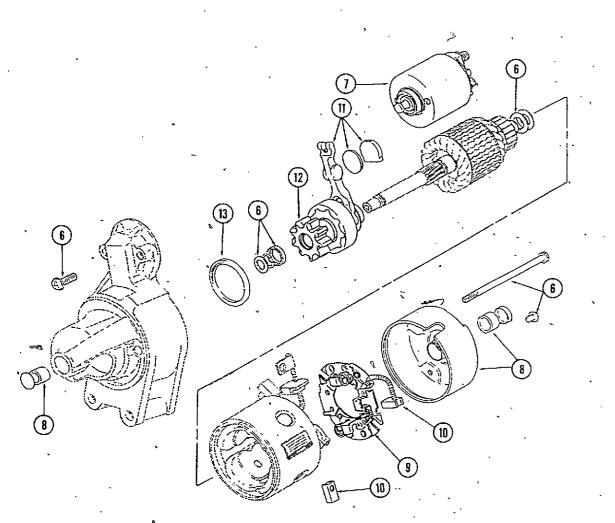

· REF.	PART NO.	DESCRIPTION	REQ'D
1	C 32448	BOLT - thru 5/16" - 18 x 3-1/2"	2
2	192้- 20	LOCKWASHER - 5/16"	2
. 3	C 32449	WASHER - special (outside mounting bolt)	1
4	C 20248	WASHER - 5/16" (inside mounting bolt)	1
5	C 32312	STARTER ASSEMBLY	1
6	C 32313	KIT - hardware	1
7	C 32314	- KIT - solenoid (includes plunger)	1-
8	C 32315	KIT - bushing (includes rear cap)	
9	C 32316	HOLDER - brush (includes negative brush)	
10	°C 32317	,KIT - brush	1
11	C 32318	KIT - shift lever	1
12	C 32319	CLUTCH - starter (includes gear)	٠ 1
13	C 32320	SEAL - dust	1
14	C 31618	COVER - terminal	1

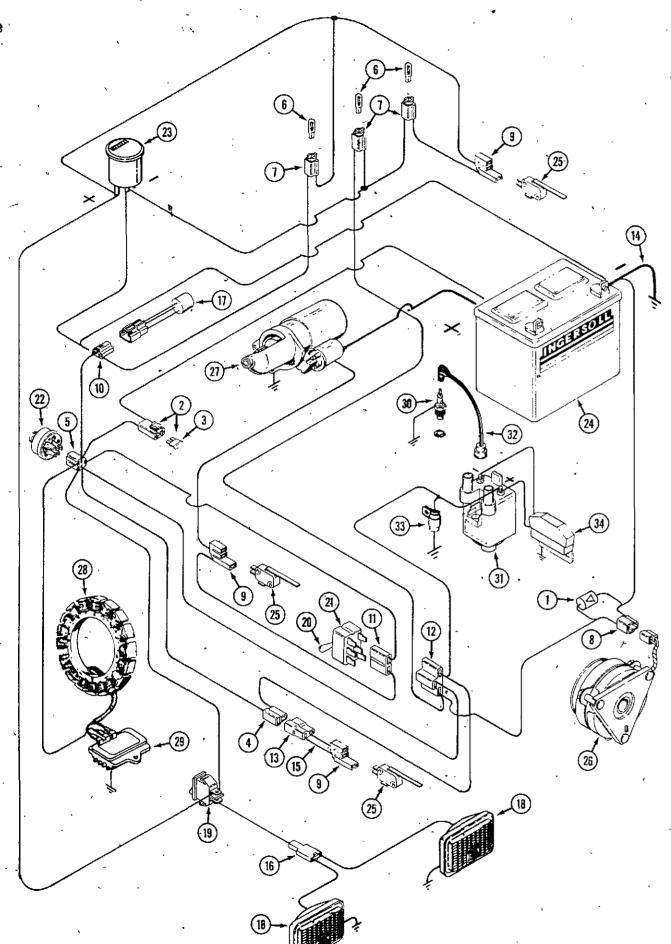



#### **ELECTRICAL SYSTEM**


#### 3016, 3018, 3020, 4016, 4018 - All 4020 - before PIN 14176500

REF.	, PART NO.	DESCRIPTION	REQ'D
	C 31941	HARNESS - wire	1
1	C 31986	KIT - diode, 6 amps, 15 volt	1
2	C 31947	Kij - fuse noider	1
3	C 30260	FUSE - 30 amp	1
4	C 25338	CONNECTOR - seat harness, male	1.
5	C 24460	CONNECTOR - ignition switch	1,
6	·C 30262	BULB - indicator lights (not included with harness)	3
7	C 30263	SOCKET - bulb	3
8	C 31948	CONNECTOR - PTO	1
9	C 30279	CONNECTOR - switch	3
10	C 25486	CONNECTOR - sensor	.1
11	C /31952	CONNECTOR - PTO switch, 2 terminal	1
12 .	C / 31950	CONNECTOR - PTO switch, 3 terminal	1
13	C 24813	CONNECTOR - seat harness, female	1
14 .	C 31943	CABLE - battery negative to ground	1
15 .	C 31044	HARNESS - wire, seat switch (includes Ref. 9 and 13)	1
16	C 14537	CONNECTOR - headlights	1
17	°C 31617	SENSOR - voltage (includes connector)	1 -
18	C 32178	HEADLIGHT - 12 volt (see page 63 for service)	2
19	C 29322	SWITCH - headlight	. 1
20	C -31619	CAP - PTO switch	1
21	C 31937	SWITCH - PTO	1
22	C 30530	SWITCH - ignition (includes key and mounting hardware)	1 °
	C 32407	KEY - ignition	2
23	C 31623	HOURMETER	1 、
24	C 31213	BATTERY - 12 volt, 32 amp, 230 CCA	1
25 ·	C 30275	SWITCH - inter - lock	` 3
26	NSS	CLUTCH - PTO (see page 25 for repairs)	1
27	C 32312	STARTER AND SOLENOID - (see page 57 for repairs)	1
28	C 24956	STATOR - charging	1
•	C 32458	KIT - terminal connector	2
29	C 32461	RECTIFIER - voltage, 12 volt	1
30	C 32454	SPARK PLUG - includes gasket	2
31	C 32296 .	COIL - ignition 12 volt	1
32	C 32298	CABLE - spark plug 9"	1
32 ·	C 32299	CABLE - spark plug 18-1/2"	1
33	C 32307	CONDENSER	1
34	C - 32294	CONTROL - ignition	1
		,	

## ELECTRICAL SYSTEM

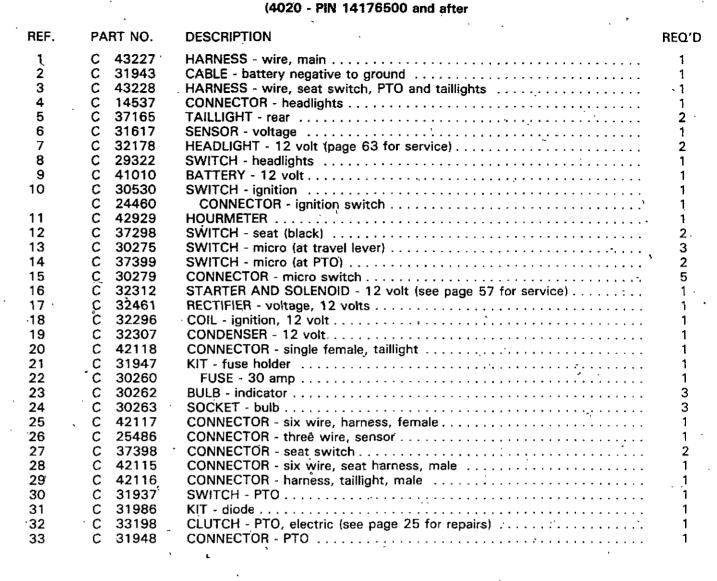

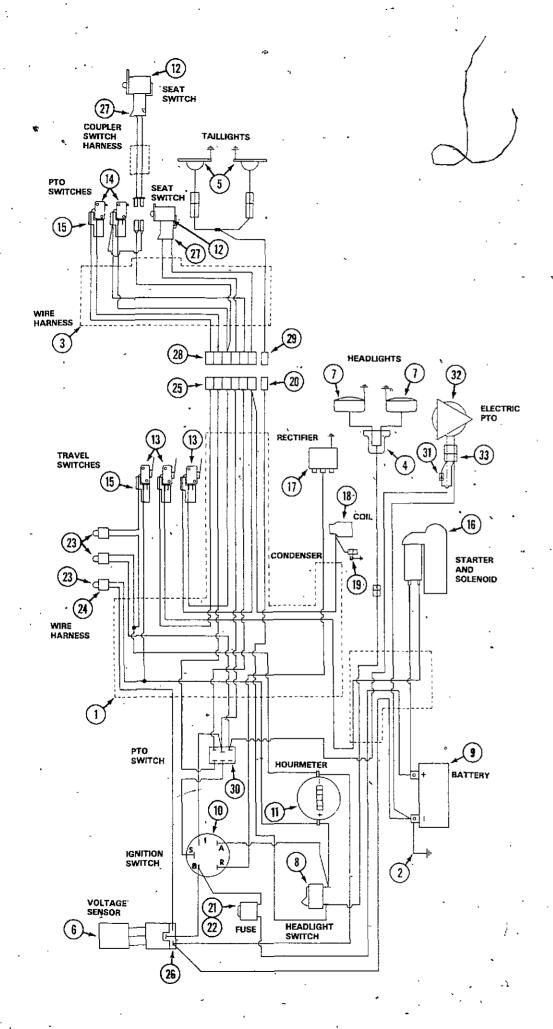

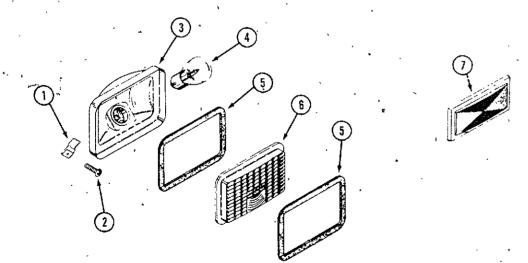


## ELECTRICAL SYSTEM HARDWARE


_		1	
REF.	PART NO.	DESCRIPTION	REQ'D
1 '	121- 21	BOLT - 1/4" 20 x 1/2" flange lock	1
2	182- 525	BOLT - #10 - 32 x 3/8"	2
3.	C 32460	LOCKWASHER - #10 internal tooth	2
4	C 32453	CLIP - wire	1
5	C 32456	BOLT - 1/4" - 20 x 1"	2
6	C 32455	CLIP - wire	2
7	187-1036	SCREW - 1/4" - 20 x 1"	. 1
8	182- 12	SCREW - #4 - 40 x 1-1/8"	2
9	192- 13	°LOCKWASHER - #4	2
10	129- 13		2
11		NUT - #4 - 40	_
12		TIE - wire	UAR
13		NUT - M5 metric (negative terminal)	1
	C 32300	NUT - M4 metric (positive terminal)	1
14	193- 6	LOCKWASHER - #10	3
15	C 32459	SCREW - #10 - 32 x 1" self lock	3
16	C 32295	INSULATOR - ignition module	1
17	C 31619	CAP - PTO switch	1
18	C 31620	NUT - knurled 1/2" - 27	1
19	C 31621	RETAINER - battery	1
20	C 24069	COVER - battery positive terminal	1
21	C 32396	NUT - switch	1
21	NSS	NUT - switch, knurled, black (use C32396 and C32397) shown	.1
22	C 32397	CAP - nut	1.
23	C 19521	CLIP - wire	3
24	111- 132	BOLT - 5/16" - 18 x 3/4" carriage	2
25	129- 102	NUT - 5/16" - 18	. 2 -
26	C 32407	KEY - ignition	1
27	C 23012	LOCKWASHER	1
·28	129- 36	NUT - #8 - 36	ີ 2
29	129- 27	NUT - #10 NF	4
30	`193- 6	LOCKWASHER - #10	2
		, , ,	
		$\theta$ .	
		HEADLIGHT ASSEMBLY AND REAR REFLECTOR	
	•		
1	C 29637	RETAINER - head light	4
2	187- 1328	SCREW - No. 8 x 3/8"	4

		: #	
1	C 29637	RETAINER - head light	4
2	187-1328	SCREW - No. 8 x 3/8"	4
	C 32178	HEADLIGHT ASSEMBLY	. 2
3	NSS	RECEPTACLE - headlight (order C32178)	1
4 .	C 28932	BULB - headlight	1
5	C 14304	GASKET - headlight	2
6	C 22573	LENS - headlight	1
7	C 30942	REFLECTOR - red, rear fender	2
		,	

6

# DECALS (English)

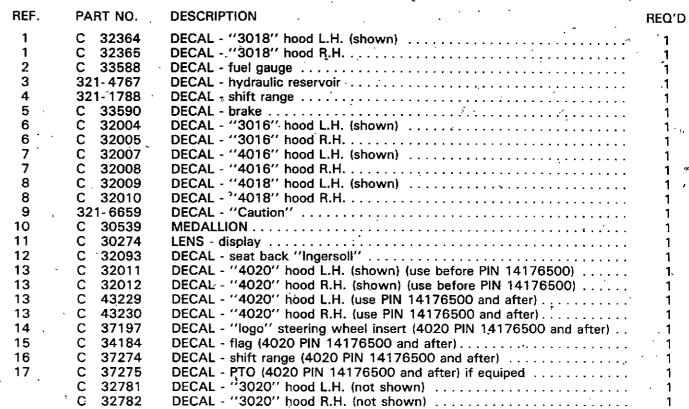

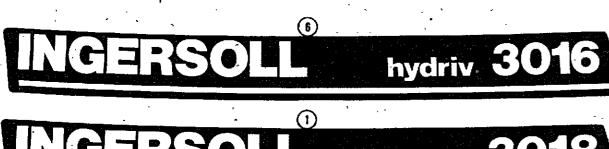


INGERSOLL hydriv 3018

INGERSOLL hydriv 4016


INGERSOLL hydriv 4018


INGERSOLL hydriv 4020
















**(ω**}


AND FILL CLOW


0

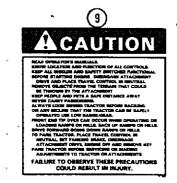





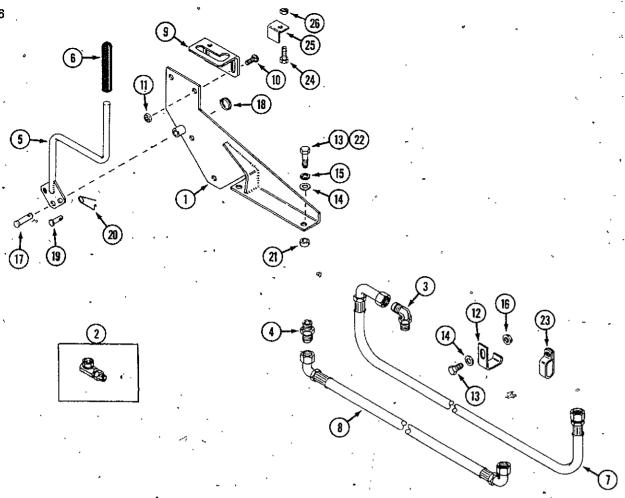

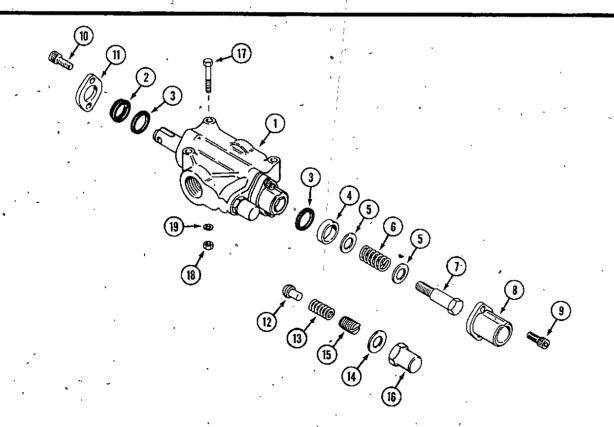

#### HP30, HP40 HYDRAULIC PTO HP30 USED ON 3016, 3018, 3020 HP40 USED ON 4016, 4018 (4020 - before PIN 14176500)

#### PTO HOSES AND MOUNTING BRACKET

REF.	PART NO.	DESCRIPTION	REO'D
1	C 32200	BRACKET - valve mounting	1
2	218-5201	FITTING - workport, 90° elbow 7/8" - 14 x 1/2" NPSM swive!	2
3	218-5107	FITTING - inlet port, 7/8" - 14 x 7/8" - 14 flare, 90° adjustable elbow	1
4	218-5062	FITTING - outlet port, 7/8" - 14 x 7/8" - 14 flare, straight	1
5	C 32403	HANDLE - valve	1
6 °	C 26020	GRIP - handle	1
7	C 32207	HOSE - pump to PTO 65" (HP30)	1
7	C 32208	HOSE - pump to PTO 63" (HP40)	1
8	C 32209	HOSE - PTO to travel valve 32" (HP30)	1
8	C 32210	HOSE - PTO to travel valve 34" (HP40)	` · 1
9	C 32211	BRACKET - handle guide	1
10	111- 101	BOLT - 1/4" - 20 x 5/8" carriage	2
11	131- 934	NUT 1/4" 20 flange lock	2
12	C 32332	CLAMP - tube (HP30)	1
13 `	113- 103	BOLT - 5/16" - 18 x 1"	3
14	195- 521	WASHER - 5/16"	3
15	192- 20	LOCKWASHER - 5/16"	. 2
16	131- 911	NUT - 5/16" - 18 flange lock	1
17	C 32214	PIN - clevis 3/8" x 1-1/2"	1
18	C 28105	RING - retaining	. 1
19	C 28964	PIN - clevis 3/16" x 1"	1
∙20	C 10883	PIN - safety	1
21	C 291.06	SPACER - 3/8" I.D. x 5/8" O.D. 5/8" long (HP30)	. 2
22	113- 122	BOLT - 5/16" - 18 x 1-1/2" (HP30)	2
23	C 32213	CLAMP - tube (HP40)	1
24	113- 3	BOLT 1/4" - 20 x 3/4"	1
25 °	C 32327	BRACKET - handle stop	1
26	131- 934	NUT - 1/4" flange lock	1
	C 22947	TIE - nylon	.1.

#### PTO VALVE


REF.	PART NO.	DESCRIPTION	REQ'D
1	C 30046	VALVE - hydraulic	1
2	C 26706	WIPER - spool	1
3	C 26707	RING - quad	· 2
. 4	C 26722	SPACER - end cap	1
5	195- 526	WASHER	-2
6	C 26724	SPRING - centering	1
7	C 26725	BOLT - shoulder	1
8	C 26726	BONNET - end cap	1
.9	165- 143	SCREW - 1/4" - 20 x 3/4" socket head	2
10	165- 142	SCREW - 1/4" - 20 x 5/8" socket head	2
11 .	C 26727	RETAINER - seal	1
12	C 26708	POPPET - relief	1
13	C 26709	SPRING - relief	-1
14	C 26710	WASHER - aluminum, seal	1
15	C 26711	SCREW - adjustment, relief	1
16	C 26712	NUT - cap, relief	1
17	113- 5	BOLT - 1/4" x 1-1/2"	3
18	129- 101	NUT - 1/4"	3
19	192- 19	LOCKWASHER - 1/4"	3
. •	.02 .0	- *	•


#### HP42 HYDRAULIC PTO For 4020 - PIN 14176500 AND AFTER

ref.	PART NO.	DESCRIPTION	REQ'D
1	C - 42198	LATCH - reverse lockout (early production)	1°
2	C 42078	GATE - shift	i
3	C 42081	STOP - lever	2
· 4	C 42082	PIN - hinge	1
5	C 42083	SPRING - torsion	1
` <b>6</b> ` ,		ACTUATOR - switch	1
7	*C 29629	SCREW - 5/16" - 18 x 3/4"	2
8	C 37406	LEVER - PTO	1
.9	C. 40487		i 1
		KNOB	ı
10 11	C 28964		2
12	132- 329	PIN - cotter, 1/16" x 3/4"	2
	218-5062	FITTING - 7/8"	1
13	218-5107	FITTING - 90° 7/8"	3
. 14	C 30046	VALVE - PTO (repairs page 67)	1
15	C 37401	BRACKET - actuating	1
16	61- 420	SCREW - 1/4" - 20 x 1-1/4" socket head	2
17	218- 465	FITTING - 1/2" x 7/8" - 14	2
18	C 37142	NIPPLE - pipe	2
19	C 37,187	COUPLING - quick, maiè 7/8"	2
20	C 37188	COUPLING - quick, female 7/8"	1 .
21	C 37144	CLAMP*	4
22	C 37145	COVER - clamp	2
23	113- 14	BOLT - 1/4" - 20 x 2"	. 4
24	131- 934	NUT - 1/4" - 20 flange lock	4
25 .		CAP - dust	1
26	C 40642	> DOLIC - duse	1
27	· C 37454	PLUG - dust	, ,
		CONDON, - corrugated (cut to length)	2
28	C 22947	TUBE - L.H.	4
29	C 37233		1
30	C 37234	TUBÉ - R.H.	1
31	,C 33560	HOSE - hydraulic 23"	. 1
32 ·	218- 443	FITTING - 3/8" x 1/4"	. 1
33		· WASHER - spring	2
34	C 41043	COUPLING - quick, male 9/16"  CAP - dust  TUBE / pump to P.T.O. "in"	1
35 、	C 33404	CAP - dust	1
36	C 40671	TUBE ✓ pump to P.T.O. "in"	· 1
37	C 40673	. TUBE - travel valve to P.T.O. "out"	1
38	C 41044	COUPLING - quick, female 9/16"	1
39	C 37439	KEY - coupling switch	1
,	C 37440	DECAL	1
•	113- 1	BOLT - 1/4" - 20	2
	195- 518	DECAL BOLT - 1/4" - 20 WASHER - 1/4"	<u>.</u>
40	C 37437	BRACKET - switch mounting	1
41	C 37459	CUSHION - key	1
42	C 42048	KIT - coupler switch	. 1
42 44	C 37399	SWITCH - interlock	2
	-		. 2
45		SCREW - #4-40 x 1-1/8"	
46	C 33697	NUT - #4 - 40	2
47	218- 475	FITTING - 90° 7/8" x 7/8" male	1 .
48	218-5232	FITTING - 90° 7/8" male x 7/8" female	1
	C 37435	HARNESS - wire, PTO switches	₹1
		•	
		<u>.</u>	

#### K22 SLEEVE HITCH (3016, 3018, 3020) and K24 SLEEVE HITCH (4016, 4018, 4020)

REF.	PART NO.	DESCRIPTION REC	ס׳ב
1	C 22218	HITCH FRAME ASSEMBLY (K24) shown	1
1	C 23707 -	HITCH FRAME ASSEMBLY (K22)	1
2	C 25371	ARM - lift	1
. 3	195- 541	WASHER - plain 21/32"	2
4 ·	C 10898	PIN - retaining	2
5 (	C 14459	BRACKET - hitch mounting R.H. (shown)	1
5	C 25789	BRACKET - hitch mounting L.H	Ī
6	113-2400	BOLT - 1/2" x 1-3/8" N.C. hex, zinc	3
7.	192- 23	LOCKWASHER - 1/2" zinc	5 ·
8	C 25382	PLATE - lift lever	1.
9	C 14568	PIN - drawbar	1
10	129- 105	NUT - 1/2" N.C. hex, zinc	4
11	195- 545	WASHER - plain 3/4" zinc	2
12	132- 306	PIN - cotter 3/16" x 1-3/4"	2
13	22- 844	BOLT - 1/2" x 2" N.C. hex, zinc	2 1
14	113- 417	BOLT - 1/2" x 1-1/4" hex	2
	3		

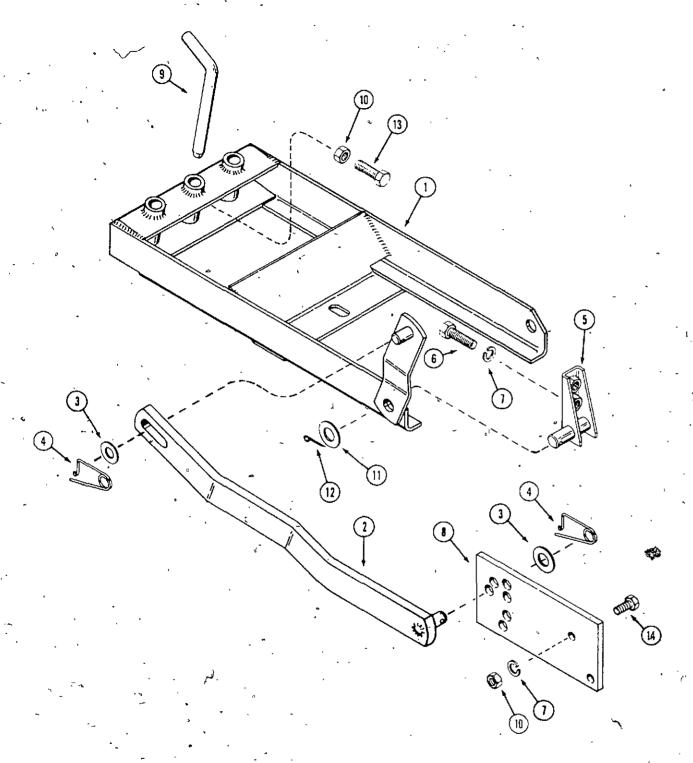

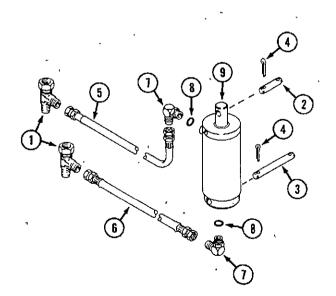


## HH34 THREE POINT HITCH


REF.	PART NO.	DESCRIPTION	" REQ'D
1	C 32215	PLATE - hitch	· 1
2	C 32230	SWIVEL - lift link	2
3	C 32231	PIN - spiral 3/16" x`1-1/2"	
4	219- 403	FITTING - grease	2
5	C 32428	LINK - adjusting	2
- 6	NSS	ROD - adjusting (use C32235 and 129-107)	, <u>ī</u>
7	C 32235	BOLT - 5/8" - 11 x 5"	1
8	C 32239	SPACER - bolt	1
9	129- 107	NUT - 5/8" - 11	2
10	C 32240	ARM - lift	2
11	C 32242	ARM - stabilizer	1
12	C 32243	BRACKET - angle	1
13	C 32244	SUPPORT - angle	1
14	C 32249	TUBE - upper link	1
15	C 32426	BALLJOINT - R.H.	1
16	C 32427	BALLJOINT - L.H	1
17	113- 447	BOLT - 1/2" - 13 x 3-1/2" (use with 3000 series tractors)	1
:17	113- 426	BOLT - 1/2" - 13 x 2-3/4" (use with 4000 series tractors)	1
18	113- 417	BOLT - 1/2" - 13 x 1-1/4"	
、19	111- 517	BOLT - 1/2" - 13 x 1" carriage	2
20	192- 23	LOCKWASHER - 1/2"	3
21	131- 930	NUT - 1/2" - 13 flange lock	2
22	NSS	PIN ASSEMBLY - klick (assemble from item 24)	
23	C 14717	PIN - clevis 5/8" x 2-1/2"	6
24	C 28222	PIN - klick	UAR
25	138- 2073	PIN - spiral 3/16" x 1-1/4"	1
26	132- 348	PIN - cotter 1/4" x 1-1/4" (early production)	2
27	195- 541	WASHER - 5/8"	2.
28	C 14768	SPACER - klick pin	
	C 22947	TIE - nylon	2
		·	


#### HH34 THREE POINT HITCH CYLINDER


REF.	PART NO.	DESCRIPTION	REQ'D
1	218- 5479	FITTING - tee 1/2" - 20 swivel female x 1/2" - 20 male	2
2	C - 29693	PIN - cylinder rod 1/2" x 1-3/4"	1
3	C 32254	PIN - cylinder foot 1/2" x 4-5/8"	1
4	132- 31Ò	PIN - cotter 1/8" x 1"	<b>4</b>
5	C 32247	HOSE - hýdraulic 1/4" x 33" (cylinder to forward valve port)	1
6	C 32246	HOSE - hydraulic 1/4" x 24 (cylinder to rear valve port)	1
7	218-5104	FITTING - 90° elbow 5/16" tube x 1/2" - 20	2
8	218-5004	O-Ring	1
9	C 32245	CYLINDER - lift	1


#### **F27 HITCH ADAPTER**

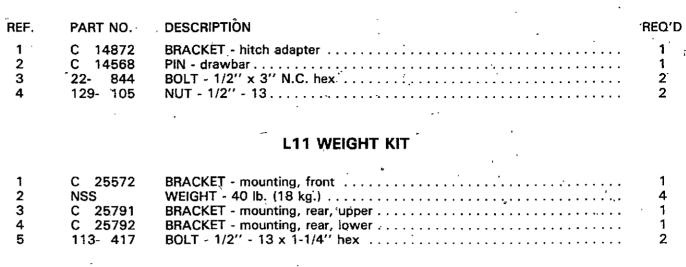

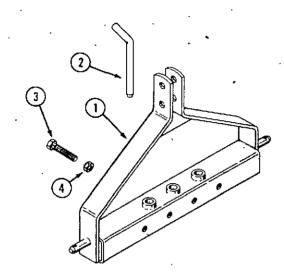


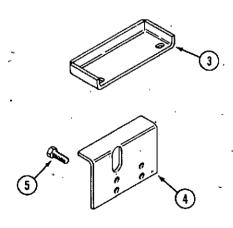


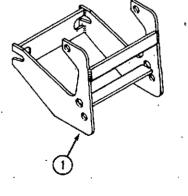






#### H18 FRONT END WEIGHT BRACKETS

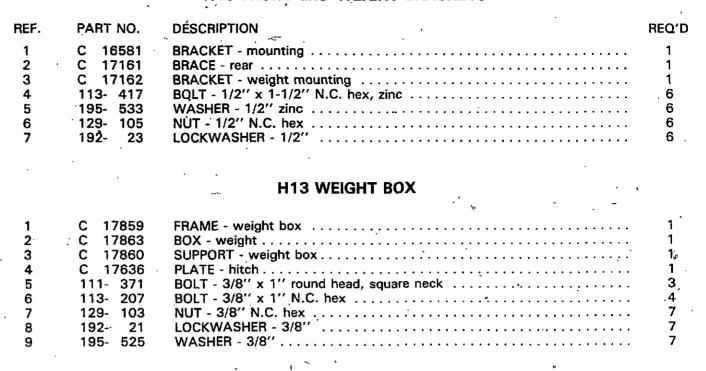

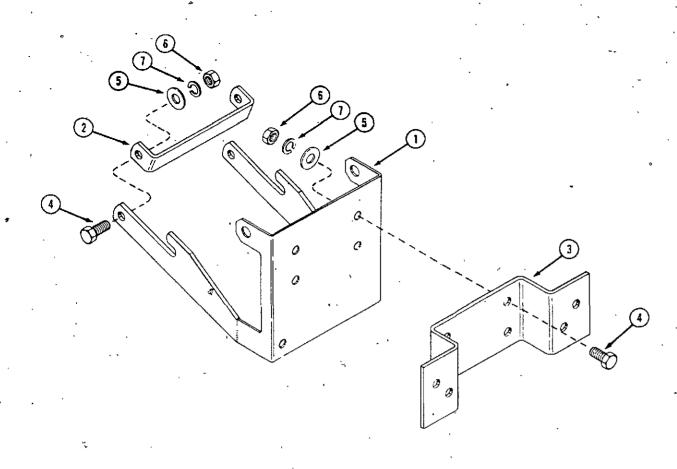

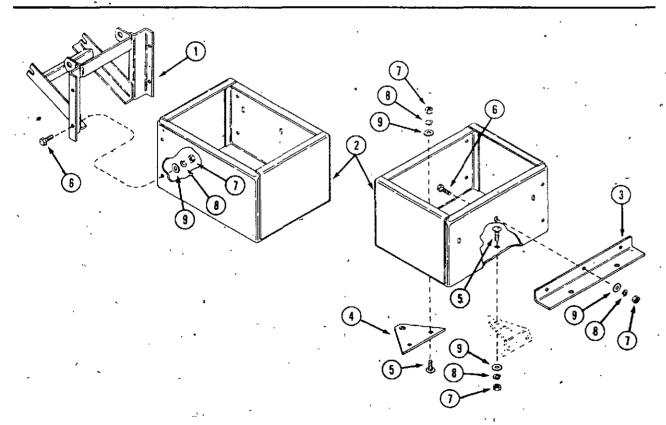

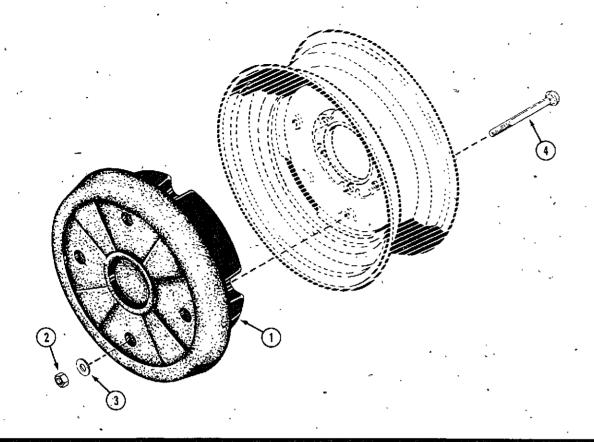


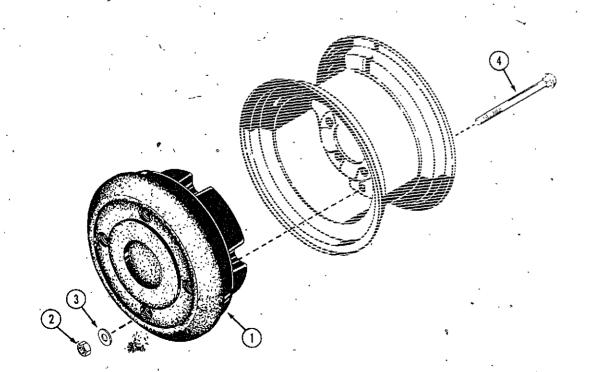


	MODE	EL 3016, 3018, 3026, 4016, 4018, 4020 COMPACT TRACTORS	79
		WW40 WHEEL WEIGHTS (4016, 4018, 4020)	
REF.	PART NO.	DESCRIPTION	REQ'D
1 2 3 4	NSS 131-1182 195- 533 111- 525	WEIGHT - wheel, 75 lb. (order as machinery item)  NUT - 1/2" N.C. hex  WASHER - 1/2"  BOLT - 1/2" x 6" round head, square neck	2 4 8 8
	ww:	30 AND WW30W WHEEL WEIGHTS (3016, 3018, 3020)	
•	•	3	e.
1 2 3 4. 4	NSS 131-1182 195- 533 111- 521 C 30545	WEIGHT - wheel 55 lb. (order as Machinery Item)  NUT - 1/2" N.C. lock  WASHER - 1/2"  BOLT - 1/2" x 7" carriage (WW30)  BOLT - 1/2" - 13 x 8-1/2" (WW30W)	2 8 8 8 8
-			-


#### **HFC34 FLOW CONTROL VALVE KIT**


For Model 3016, 3018, 3020, 4016, 4018 (4020 BEFORE PIN 14176500)

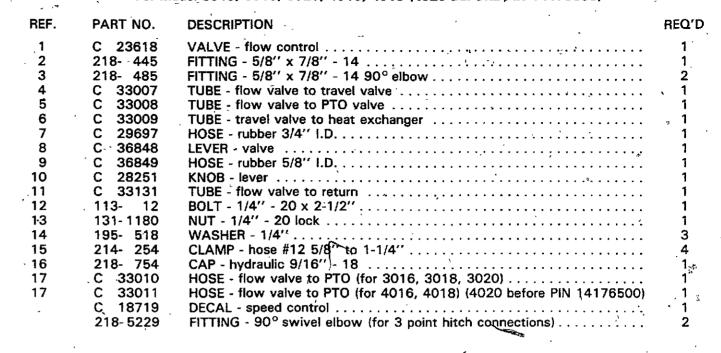

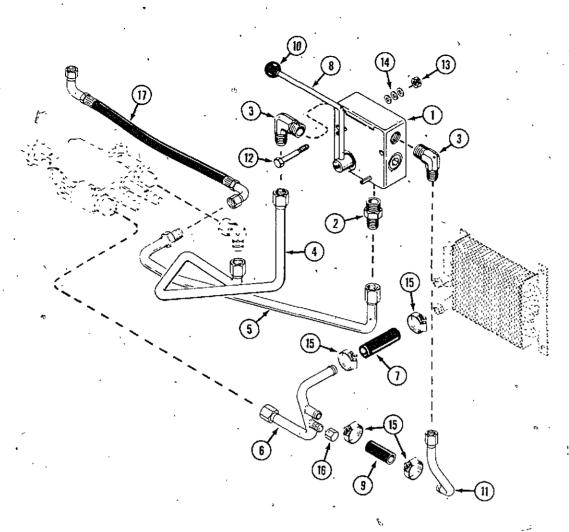

# HFC34B FLOW CONTROL Use with HP42 PTO for 4020 - PIN 14176500 AND AFTER

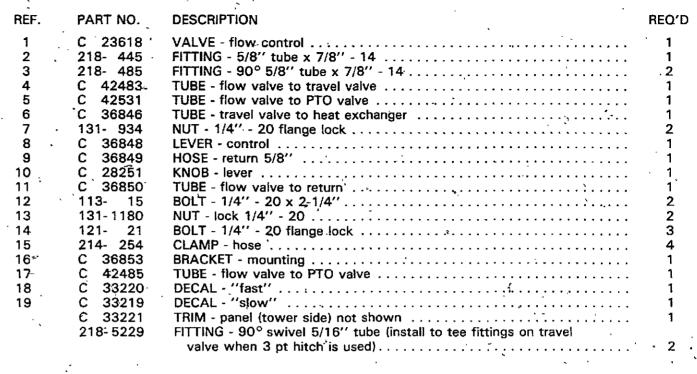

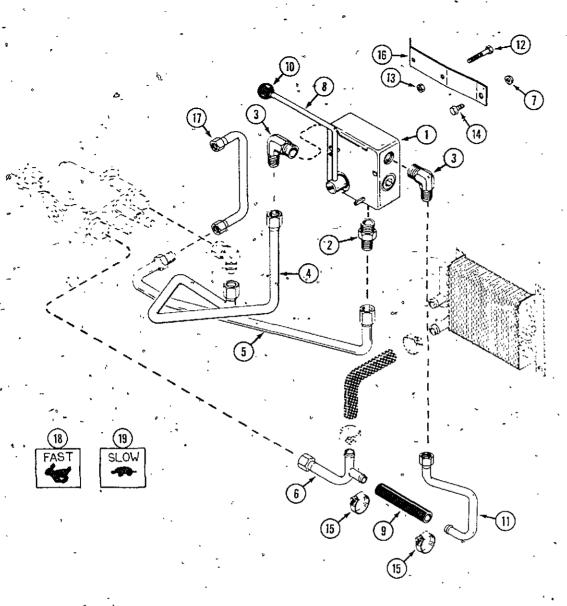

•		•		•											•		
PART NO.	PAGE NO.	REF. NÖ.	PART NO.	PAGE NO.	REF.	PART - NO.	PAGE NO.	REF.	PART NO.	PAGE NO.	REF.	PART NO.	PAGE NO.	REF.	PART' NO.	PAGE NO.	REF.
422778883862023856666165568123499778889407806007123345789001269 1000000000000000000000000000000000000	933395571779111117951111177151131191155153173515151111111111	21419212461522328 3157616273353514923282112131994567811112316 9 6 4 0 8 6 61 06 7 3 97 4 6 84 3638 36 0123 7 24 9	03358344649039255531458893134457889015677778890123022511501 11777778866192221722223444578890117777788802177777888022172222222222222	57777777777777777777777777777777777777	78913145132 182132551282113222244424678911221111111111224679123211111	7561120103446788812381125894831890122278877720178879097560091344993368 CCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC	21153799999117735971559797737777731137933715131993755915911915555555555	21113077860682 5 411245941635555553111 2 2217111123915 111111111431 11111144	901122456777418047344994486624555338888624599556701891275621666666677777777777777777777777777	55557959319115555191555777777951535519137777777777	444412322342855511216753411167221324121122222112311111467812296212299	257226261111128899446584576556669665556789933749011288999999900000000000000000000000000	36473334888444444246144166333355563333325612655654444445781 231111111 11 11	413214811183	011236789256679924457899112666713466713466713766799299999999999999999999999999999999	775579759999595777779991353799511119995919191591917777191593999 11111421344416653333112356565656562222356675333	25452121 12325211134491111 6219231111 8882451326272121911112221141311

14	, N	AGE REF.	PART NO. ,	PAGE REF NO. NO	. NO.	PAGE NO.	REF.	; ;	PART NO.	PAGE REF.	PART NO.	PAGE NO.	REF.	PART NO.	PAGE NO.	REF.
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	44353335354444444444444444444444333322222222	14 6 2 7 6 1 1 1 1 2 2 2 1 4 5 5 5 6 7 7 8 9 1 1 1 2 3 3 3 3 1 2 1 1 1 1 2 2 2 3 4 5 5 5 6 7 7 8 9 1 1 1 1 2 2 3 4 5 5 5 6 7 7 8 9 1 1 1 2 3 3 3 3 1 2 1 1 1 1 2 2 3 4 5 5 5 6 7 7 8 9 1 1 1 2 3 3 3 3 3 1 2 1 1 1 1 2 2 3 4 5 5 5 6 7 7 8 9 1 1 1 2 3 3 3 3 3 1 2 2 2 9 6 7 2 3 3 2 7 9 9 2 8 1 1 1 6 1 2 1 8 4 5 3 7 7 9 9 7 7 7 3 3 3 7 9 9 7 9 7 7 7 3 3 2 7 9 9 7 7 7 3 3 2 7 9 9 7 7 7 7 3 3 2 7 9 9 7 7 7 7 8 9 1 1 1 1 1 1 2 2 3 3 3 7 9 9 7 9 7 7 7 7 8 9 1 1 1 1 1 1 1 2 2 3 3 3 7 9 9 7 9 7 7 7 7 8 9 1 1 1 1 1 1 1 2 2 3 3 7 9 9 7 9 7 9 7 7 7 7 8 9 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2357016662004883771319666270031166788311994477888028888678231667000899011238888678231199447788802888867823119948802888886782311997888867823119978888888888888888888888888888888888	23 23 24 27 27 27 27 27 27 27 27 27 27	1590232390233902344567799012344567789012222444567777777777777777777777777777777	33333333933599779999995555511111139391399337777777777	3781113 2 4 89661237784477390 2461892232 14739 7 76 0123		5722233664566 C322336645665665665667893368867866789322336645667893323333333333333333333333333333333333	23 67 67 525 17 11 29 52 17 12 13 15 15 15 15 15 15 15 15 15 15 15 15 16 16 17 17 18 18 18 18 18 18 18 18 18 18 18 18 18	088899089908946433575607806333222214445658944672311316888899089464333333444565894467231136888849903570337713888888888899089357033333333333333333333333333333333333	551559333359779715595935395597555559999159599531313333111113355577 426221888444 143361144234422454446466663151611 888888884444433413222	1369511 11 112222113211333721132333254413171245688991129216925111 2 98 44 4083255 88 052 5 062711 56 20 5	124445125657788782673479045526645899016115057902947126113771155657788782673777777777777777777777777777777	799933331799531999939333335515511999999353999999335559999971999999911 266633333626665411663655553366644666666634366666663333333663666666	26 18 21 22

•			<del>-</del>		-			•	*					<b>Y</b>		•
PART NO.	PAGE NO.	REF.	PART NO	PAGE NO.	REF.	PART NO.	PAGE NO.	REF.	and the state of t	•	PART NO:	PAGE NO.	REF.	PART NO.	PAGE NO.	REF.
1 1 5 5 8 4 4 8 5 1 9 9 9 4 4 4 8 6 6 0 2 2 7 8 9 9 9 9 4 4 4 2 2 2 2 2 3 3 4 5 2 2 4 4 3 2 2 2 2 2 2 0 0 2 4 1	15 31 67 25 37 77 23 27 55 31 17	02 7 01 333 3 6 04 9 10 4672332 4482 34 1 120 1 148 221112182211811441912371634962611154	42444444444444444444444444444444444444	713193113391513153379135 <sup>5</sup> 5133377337157335977777735371317333913377935139	14443133311611 2311119111111221 2714697111211115222129 122312272112 27146971112111152222129 122312272112	131-1352-131001101131-131-131-131-131-131-131-13	917751139153735999353379191777713573137131595713731193391739135737513	22578712144491121321211312219141128158222181721275812211196227111155			19192222222222222222222222222222222222	135777713557713715913733311571915771377957995113195513537977535573513 555556 1223723334444777726622512685623376357777347777 13333314 44 44114488	91821115818155113272771361291 1111811195115331432131113181436122222211	218-44855 218-44855 218-44855 218-44855 218-44855 218-44855 218-44855 218-4755 218-4755 218-50007775 218-50007775 218-5000665 218-5000665 218-55006665 218-50066	591399133515333355553579353357935171335937593711111171555	33221433331283573572664122744312232 88412244711311121439