

# PARTS LIST

## EH230DSL

### CONTENTS


1. DRIVESHAFT .....	1 ~ 2
2. BLADE.....	3 ~ 6
3. ENGINE .....	7 ~ 10
4. CARBURETOR, FUEL TANK .....	11 ~ 14
5. ACCESSORIES .....	15 ~ 16

2019. 12.




P/N 524925

1. EH230DSL  
DRIVESHAFT

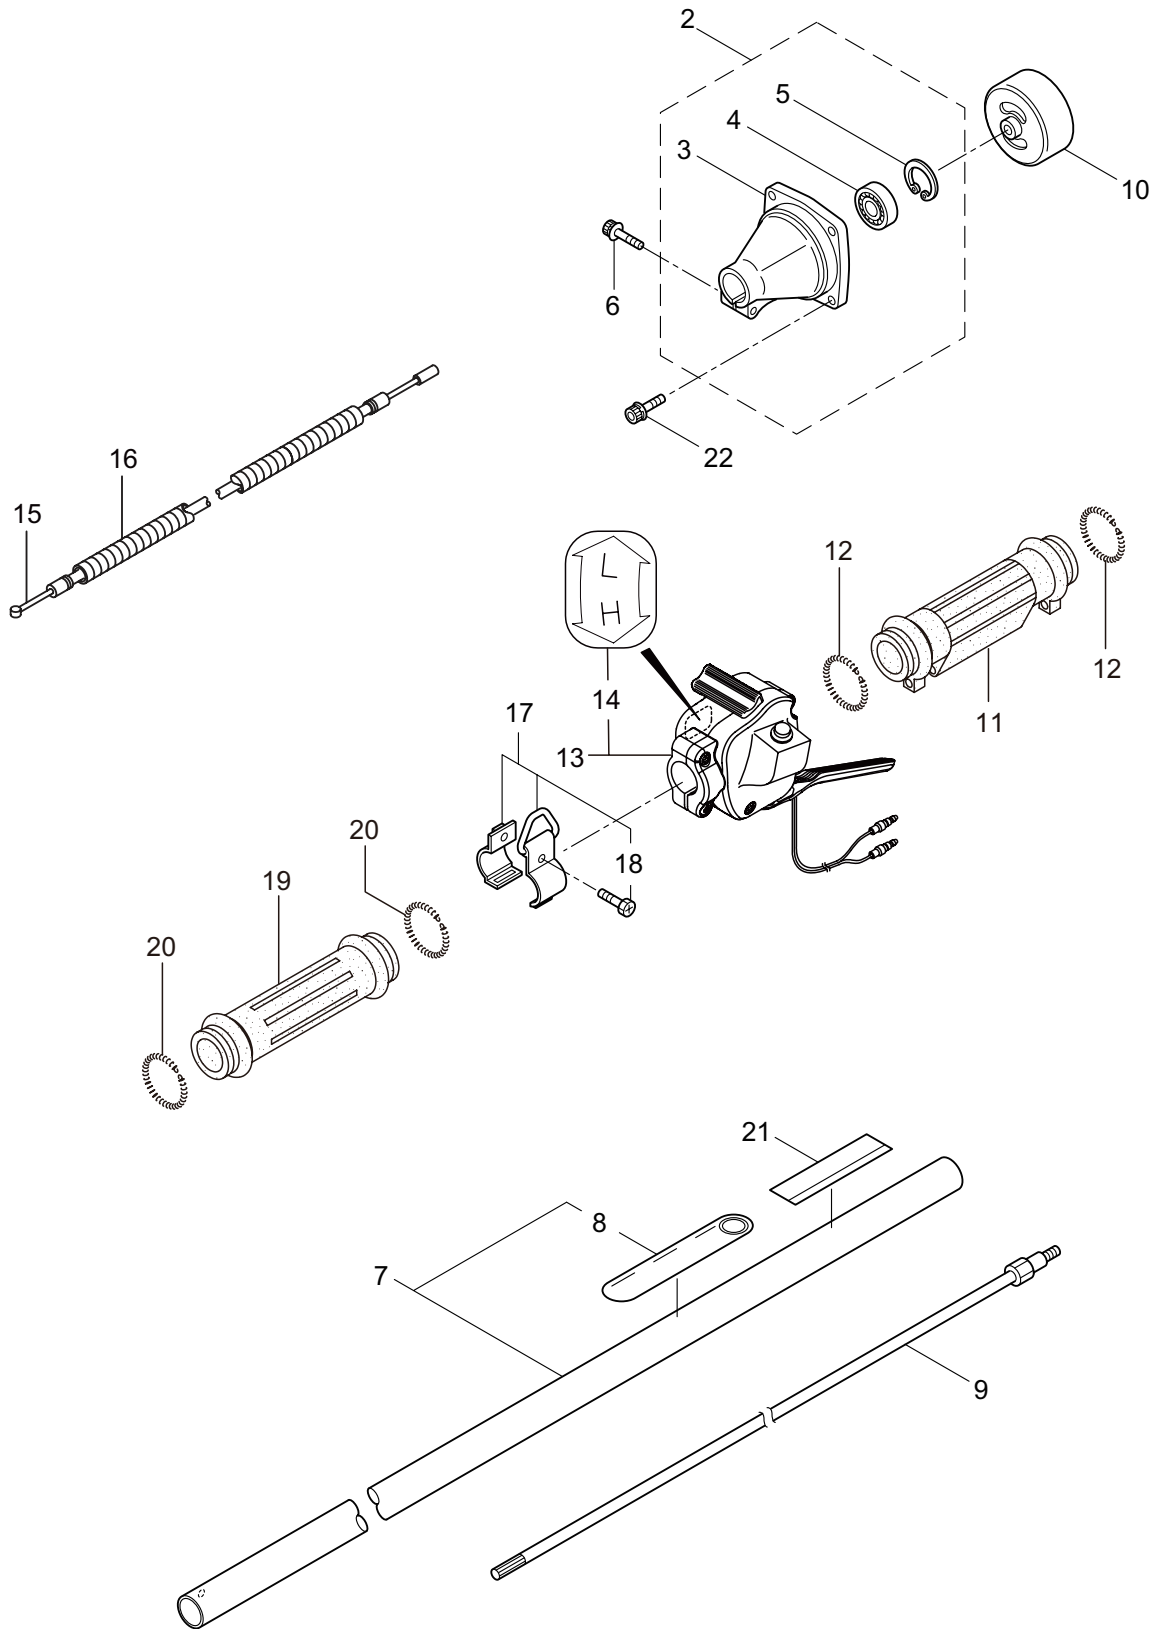


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	364864	EH230DSL	1	
1-2	219602	Clutch Case Ass'y	1	Incl.3-5
1-3	219465	Clutch Case	1	
1-4	016405	Bearing	1	#6200ZZ
1-5	013825	Snap Ring	1	#30
1-6	261246	Cap Screw	1	M5x25
1-7	242656	Driveshaft Tube Ass'y	1	Incl.8
1-8	221501	Label	1	Warning
1-9	224644	Driveshaft Ass'y	1	
1-10	054677	Clutch Drum	1	
1-11	211736	Shaft Grip	1	
1-12	211737	Band	2	
1-13	242050	Throttle Trigger Ass'y	1	Incl.14
1-14	237241	Label	1	
1-15	235752	Throttle Cable	1	
1-16	213548	Plastic Tube	1	#10x200L
1-17	054691	Hanging Bracket Ass'y	1	Incl.18
1-18	089738	Bolt	1	M5x15
1-19	211735	Shaft Grip	1	
1-20	211737	Band	2	
1-21	242159	Label	1	EH230DSL
1-22	261250	Cap Screw	4	M5x20

2. EH230DSL  
BLADE

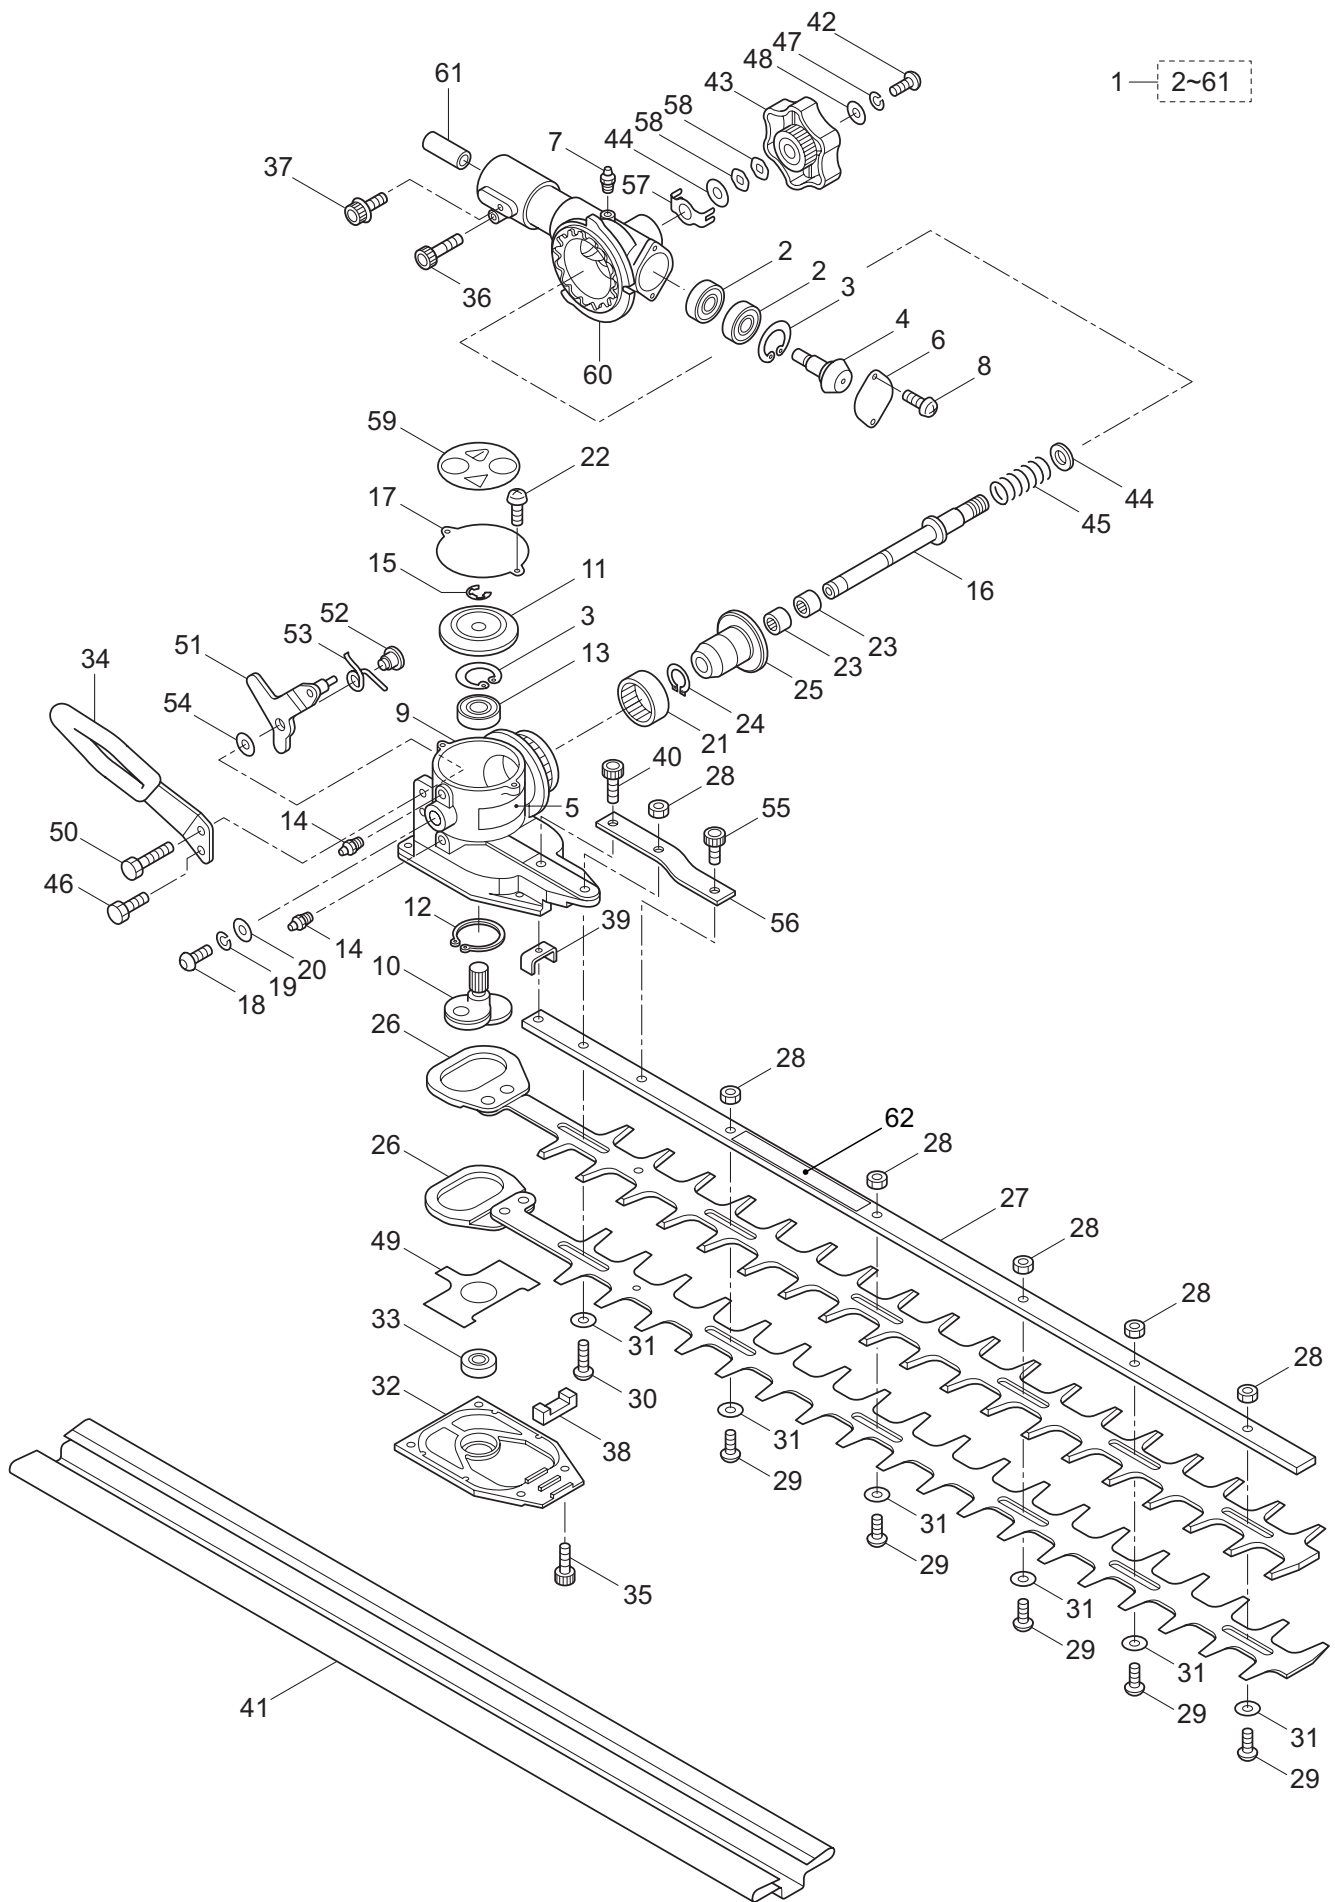


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	230806	Blade Ass'y (24)	1	Incl.2-62
2-2	407313	Bearing	2	
2-3	631757	Snap Ring	2	RTW26
2-4	407314	Bevel Gear	1	
2-5	223925	Label	1	Grease up
2-6	407315	Cover	1	
2-7	580766	Grease Nipple	1	M6
2-8	631753	Screw	2	M4x8
2-9	407316	Gearcase	1	
2-10	407317	Crankshaft	1	
2-11	407318	Bevel Gear	1	
2-12	631759	Snap Ring	1	STW28
2-13	582443	Bearing	1	#6000 2RS
2-14	580766	Grease Nipple	2	M6
2-15	631755	Snap Ring	1	ETW6
2-16	407319	Shaft	1	
2-17	407320	Cover	1	
2-18	407321	Screw	1	M6x16
2-19	631749	Spring Washer	1	M6
2-20	582436	Washer	1	M6
2-21	407322	Bearing	1	
2-22	631753	Screw	2	M4x8
2-23	407323	Bearing	2	
2-24	407324	Snap Ring	1	
2-25	407325	Bevel Gear	1	
2-26	407326	Blade	2	
2-27	407327	Guide Plate	1	
2-28	580764	U-Nut	6	M6
2-29	631765	Screw	5	L17
2-30	407328	Screw	1	L26
2-31	991913	Washer	6	
2-32	407329	Low Case	1	
2-33	631771	Bearing	1	#608 2RS
2-34	407330	Handle	1	
2-35	407331	Bolt	4	M5x14
2-36	631777	Cap Screw	1	M5x12
2-37	631778	Cap Screw	1	M5x25
2-38	407332	Felt	1	
2-39	407333	Plate	1	
2-40	407334	Bolt	1	M5x16
2-41	407335	Cover of Blade	1	
2-42	407336	Screw	1	M6x12
2-43	407337	Knob	1	
2-44	407338	Washer	2	
2-45	407339	Spring	1	

## 2. EH230DSL BLADE

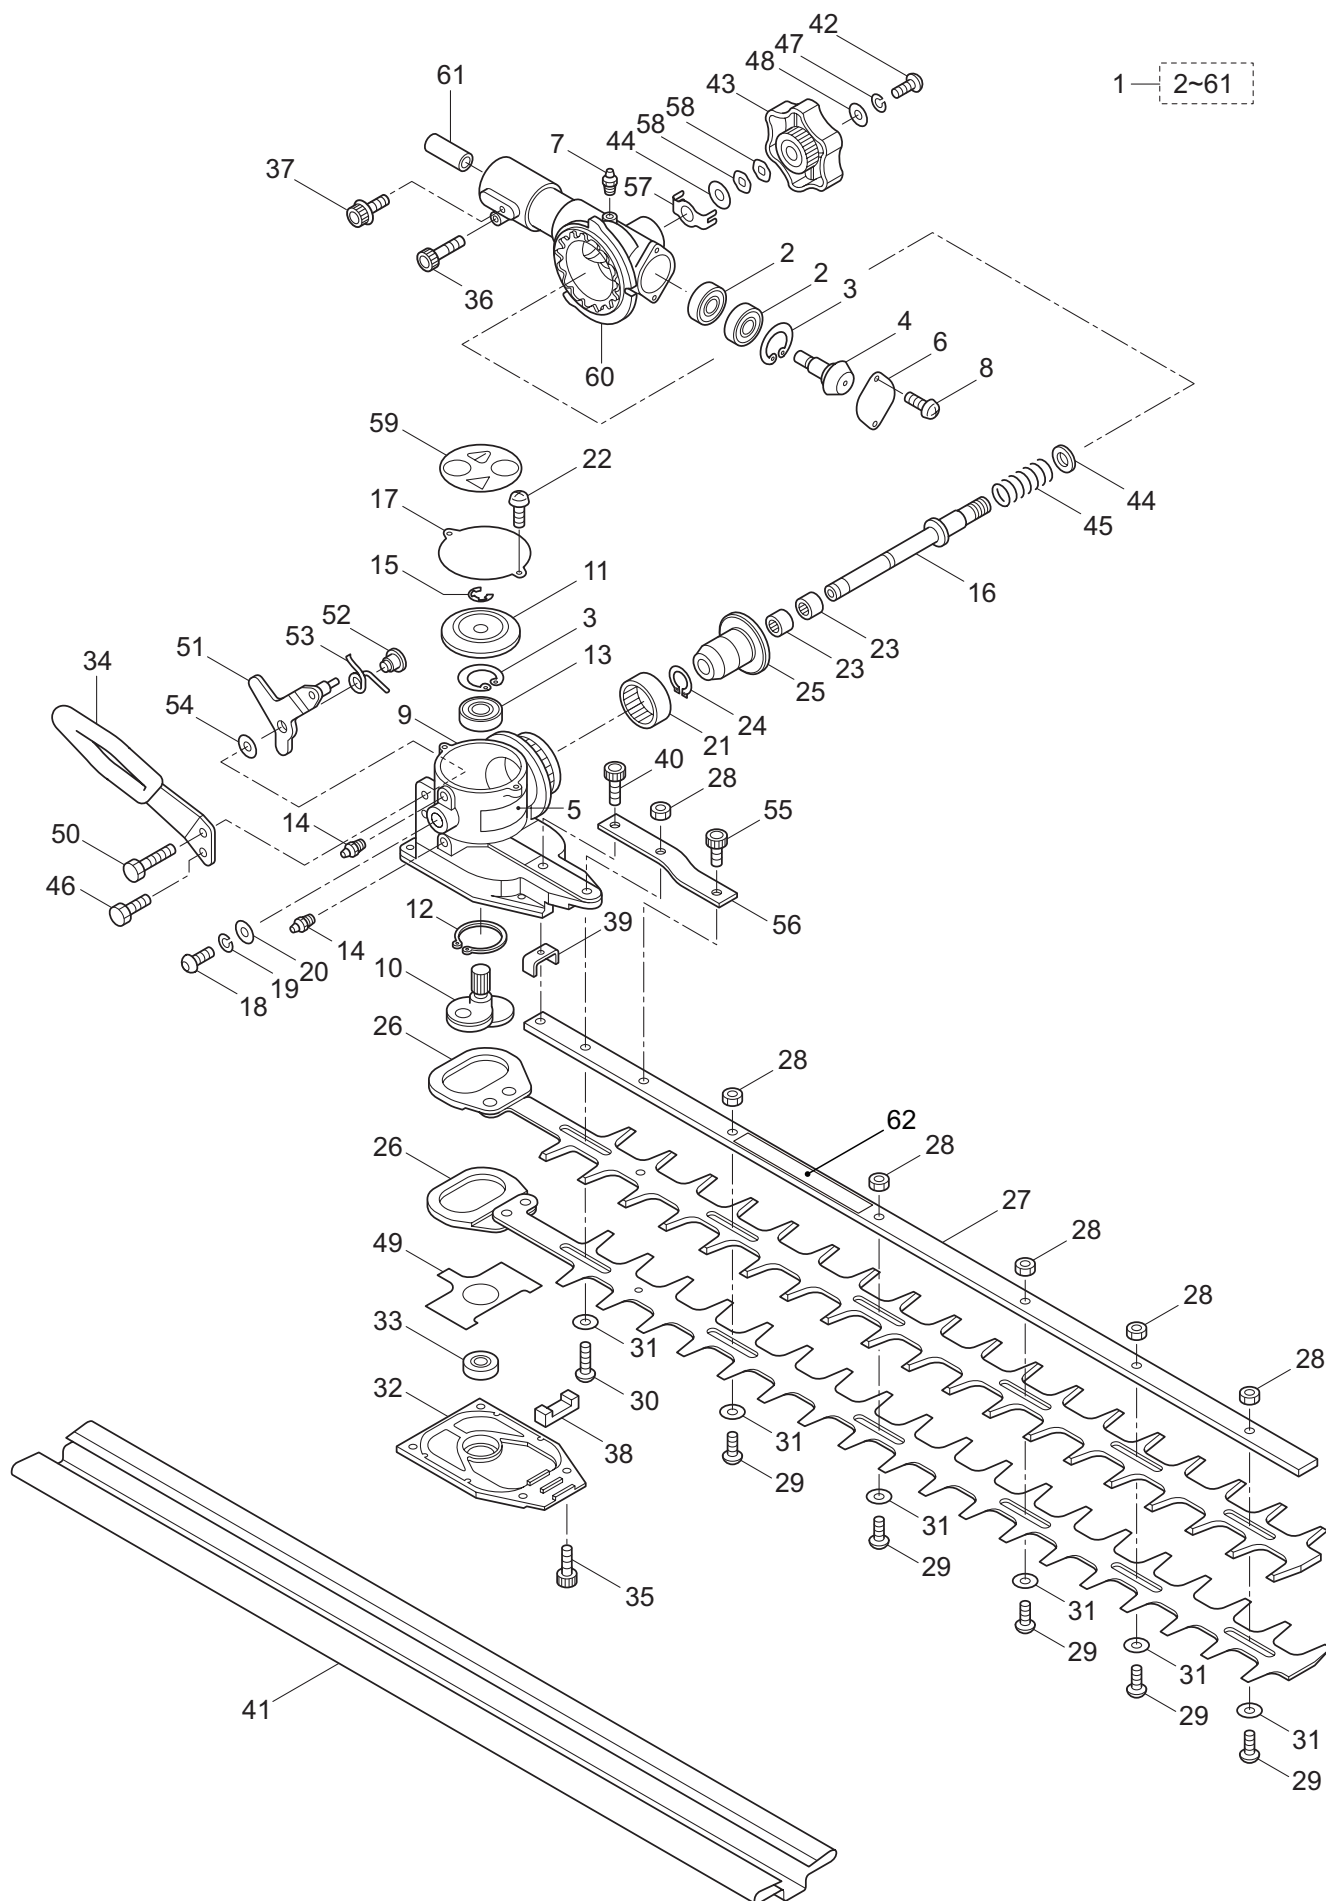

Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-46	631770	Screw	1	M6x12
2-47	631749	Spring Washer	1	M6
2-48	582436	Washer	1	M6
2-49	407340	Plate	1	
2-50	407341	Bolt	1	M6x25
2-51	407342	Lever	1	
2-52	407343	Bush	1	
2-53	407344	Spring	1	
2-54	646471	Washer	1	
2-55	407345	Bolt	1	M5x8
2-56	407346	Reinforcing Plate	1	
2-57	407347	Plate	1	
2-58	407348	Washer, Wave	2	
2-59	407349	Label	1	
2-60	407312	Joint Case	1	
2-61	631779	Joint	1	
2-62	235595	Label	1	


### 3. EH230DSL ENGINE

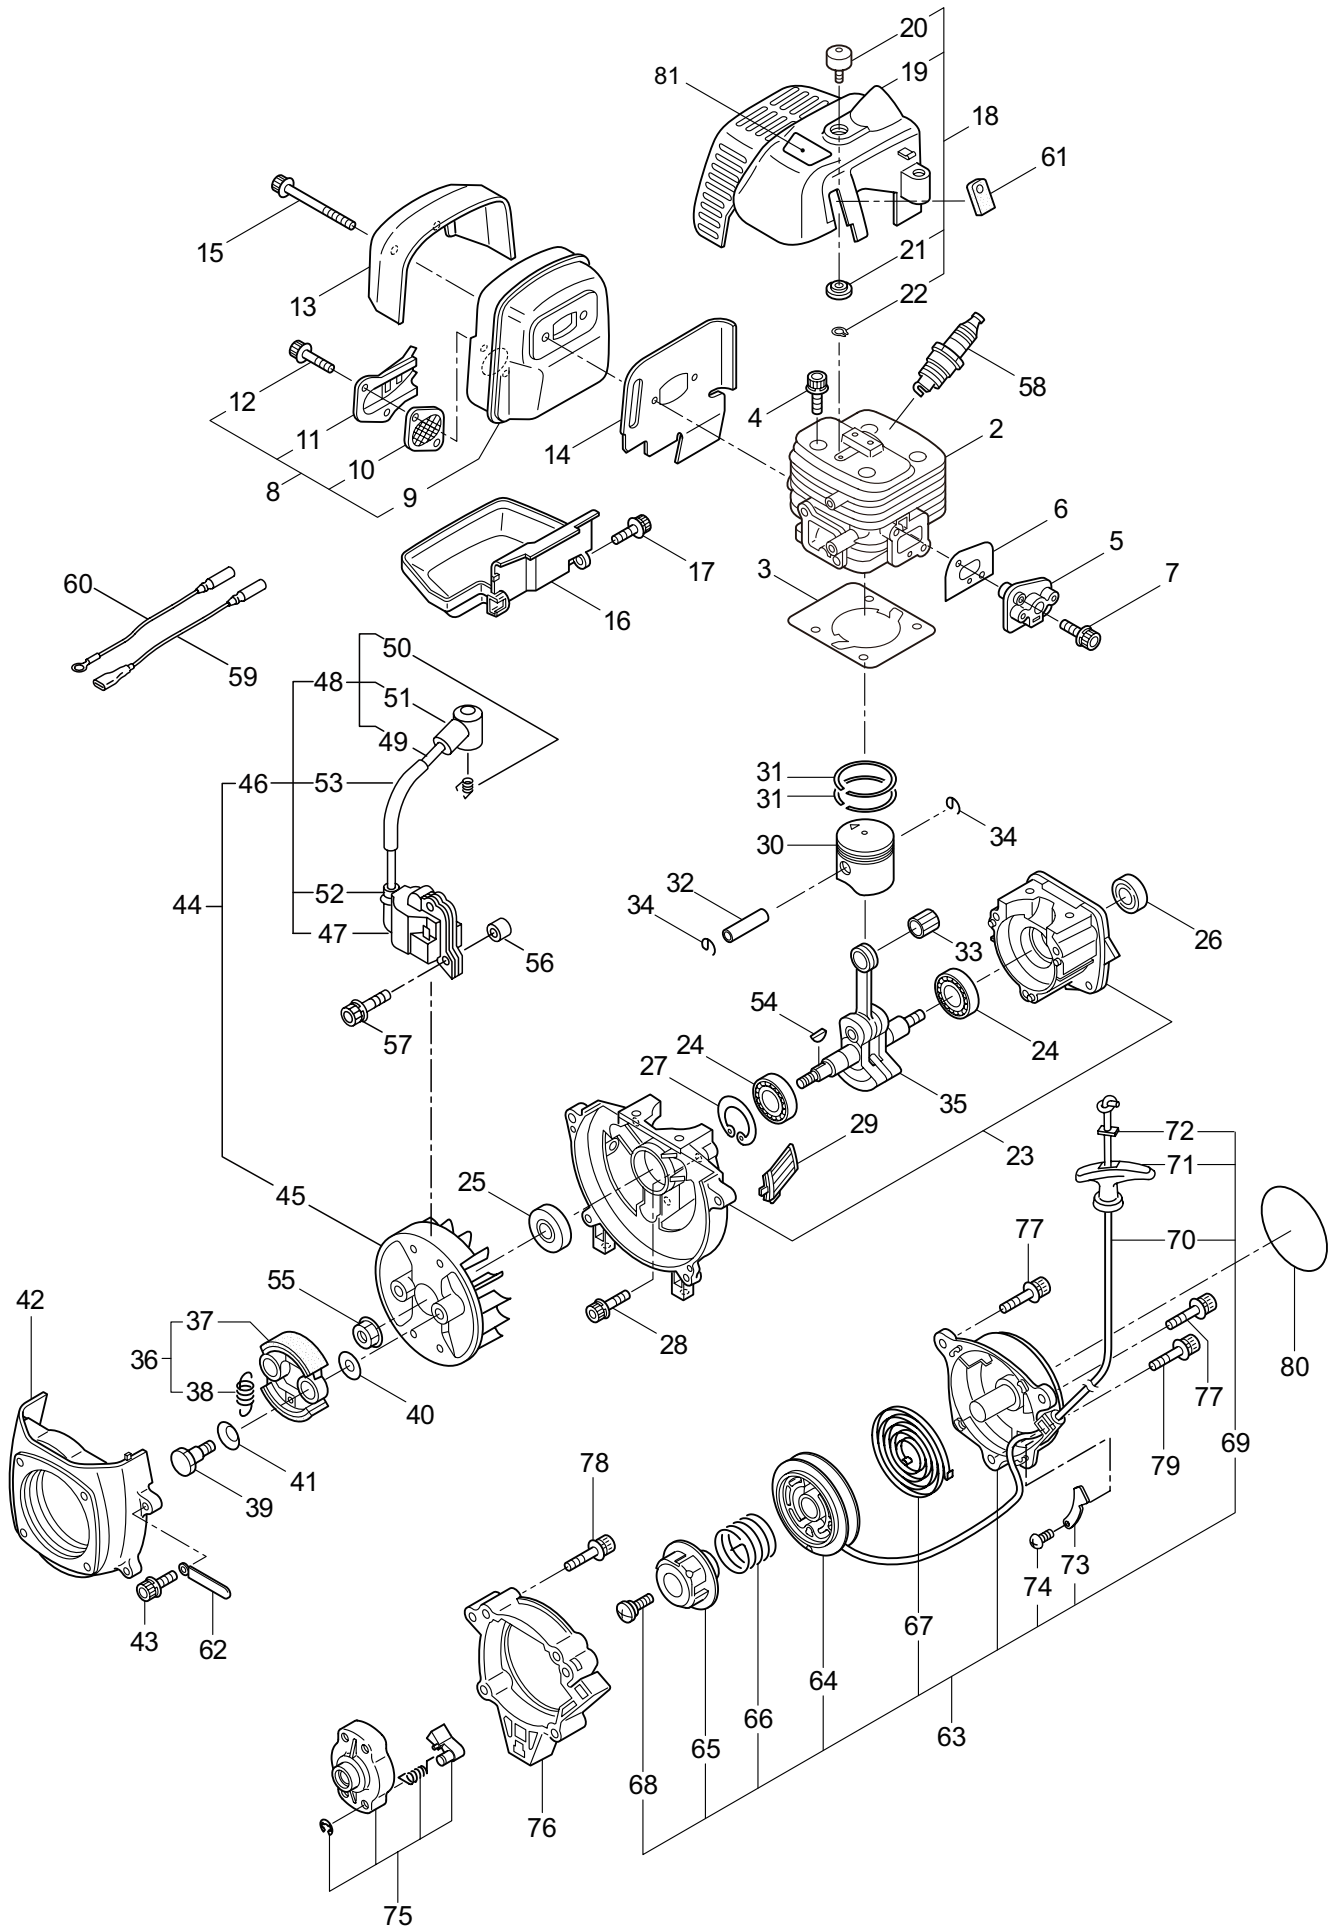




Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	875374	Engine	1	CE230/127
3-2	288499	Cylinder	1	
3-3	286074	Gasket	1	
3-4	261250	Cap Screw	4	M5x20
3-5	269144	Insulator	1	New gasket required
3-6	267049	Gasket	1	
3-7	265924	Cap Screw	2	M5x25
3-8	282208	Muffler Ass'y	1	Incl.9-12
3-9	282209	Muffler Comp	1	
3-10	267056	Spark Arrester	1	
3-11	268171	Muffler Tail	1	
3-12	265107	Cap Screw	2	M4x10
3-13	268461	Holder	1	
3-14	281440	Gasket	1	
3-15	266402	Cap Screw	2	M5x55
3-16	281446	Under Cover	1	
3-17	267191	Cap Screw	1	M5x16
3-18	288800	Top Cover Ass'y	1	Incl.19-22
3-19	281444	Top Cover	1	
3-20	286300	Knob	1	
3-21	261020	Spacer	1	
3-22	261734	Snap Ring	1	#5
3-23	289246	Crankcase	1	
3-24	280488	Bearing	2	PPL 6001
3-25	261492	Oil Seal	1	ISCD12287
3-26	261386	Oil Seal	1	ISCD12227
3-27	055185	Snap Ring	1	H28
3-28	261612	Cap Screw	3	M5x30
3-29	281442	Screen	1	
3-30	283379	Piston	1	
3-31	282177	Piston Ring	2	
3-32	261036	Piston Pin	1	
3-33	263957	Bearing, Needle	1	KTV81112EG01 B2
3-34	261576	Clip,Piston	2	
3-35	246382	Crankshaft/Conn.Rod Ass'y	1	
3-36	267327	Clutch Ass'y	1	Incl.37,38
3-37	267342	Clutch Shoe	2	(2)required
3-38	267345	Spring,Clutch	1	
3-39	264505	Bolt	2	
3-40	261189	Washer	2	6x16.5x1.2
3-41	261777	Wave Washer	2	
3-42	281443	Fan Cover	1	
3-43	261250	Cap Screw	4	M5x20
3-44	288514	Magneto Ass'y	1	Incl.45-53
3-45	288515	Rotor/Fan	1	

### 3. EH230DSL ENGINE

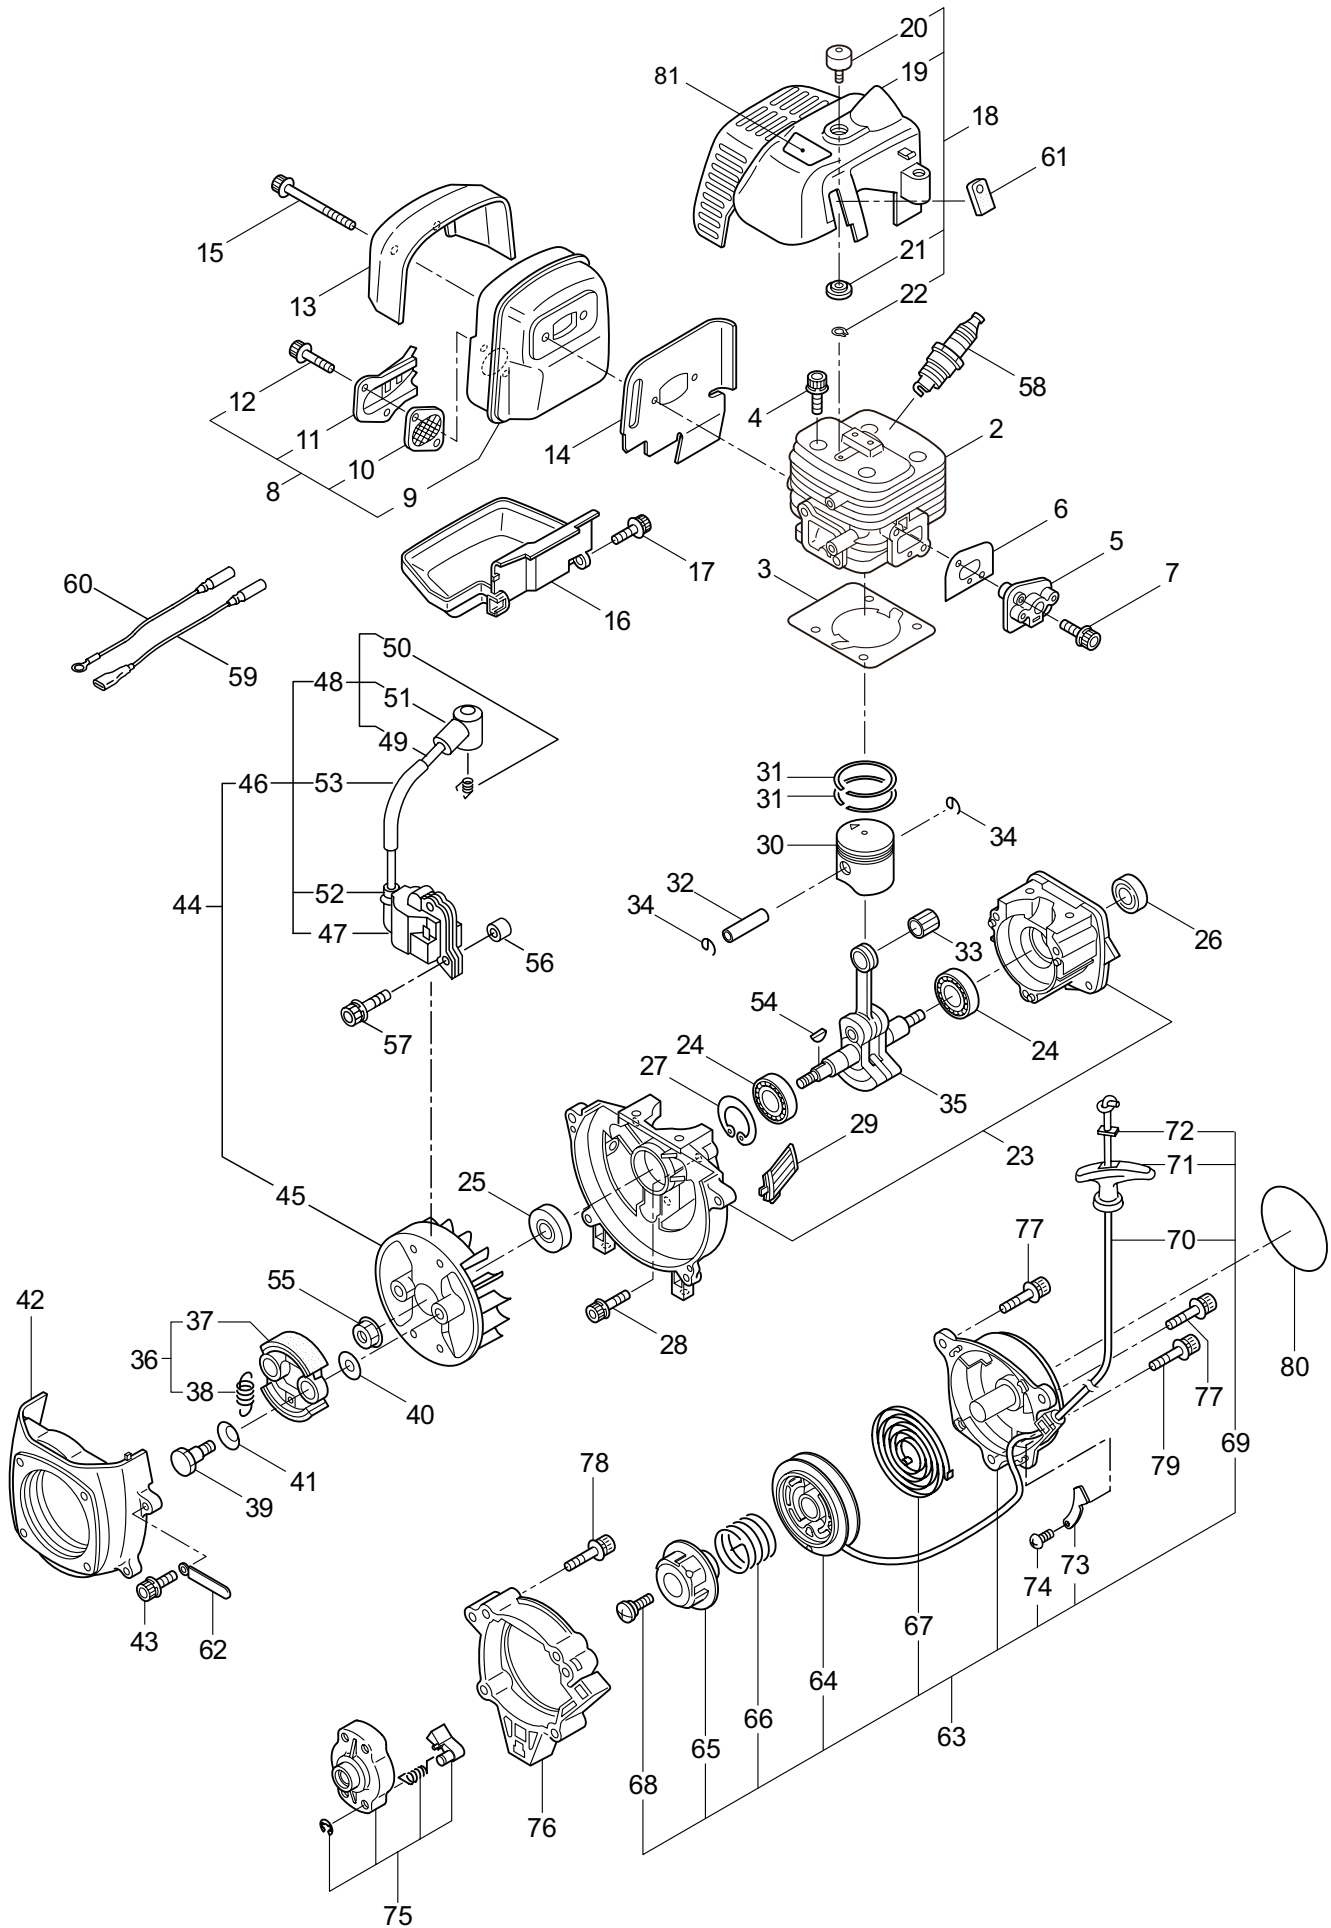


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	288516	Ignition Coil Ass'y	1	Incl.47-53
3-47	289483	Coil	1	
3-48	289484	Spark Plug Wire Ass'y	1	Incl.49-51
3-49	289485	Spark Plug Wire	1	
3-50	272805	Connector	1	
3-51	283178	Plug Boot	1	
3-52	283271	Cap	1	
3-53	289486	Insulator	1	
3-54	261076	Woodruff Key	1	3x10
3-55	261417	Nut,Rotor	1	M8
3-56	280381	Spacer	2	
3-57	261256	Cap Screw	2	M4x25
3-58	285982	Spark Plug	1	NGK BPM8Y
3-59	261772	Lead	1	
3-60	289760	Lead	1	115M4 CBH
3-61	269189	Grommet	1	
3-62	264588	Clamp	1	
3-63	273254	Starter Ass'y	1	Incl.64-74
3-64	283504	Reel	1	
3-65	283505	Cam Plate	1	
3-66	283506	Spring	1	
3-67	261721	Spiral Spring	1	
3-68	267213	Screw	1	
3-69	273261	Rope Ass'y	1	Incl.70-72
3-70	283579	Stater Rope	1	
3-71	287651	Starter Grip	1	
3-72	283511	Rope Stopper	1	
3-73	277328	Cover	1	
3-74	273037	Screw	1	
3-75	283575	Starter Pawl Ass'y	1	
3-76	284698	Adapter Ass'y	1	
3-77	283391	Cap Screw	2	M4x20
3-78	265726	Cap Screw	4	M4x16
3-79	282096	Cap Screw	1	M4x16WSW
3-80	246557	Label	1	CER230
3-81	246674	Label	1	EH230DSL

4. EH230DSL  
CARBURETOR, FUEL TANK

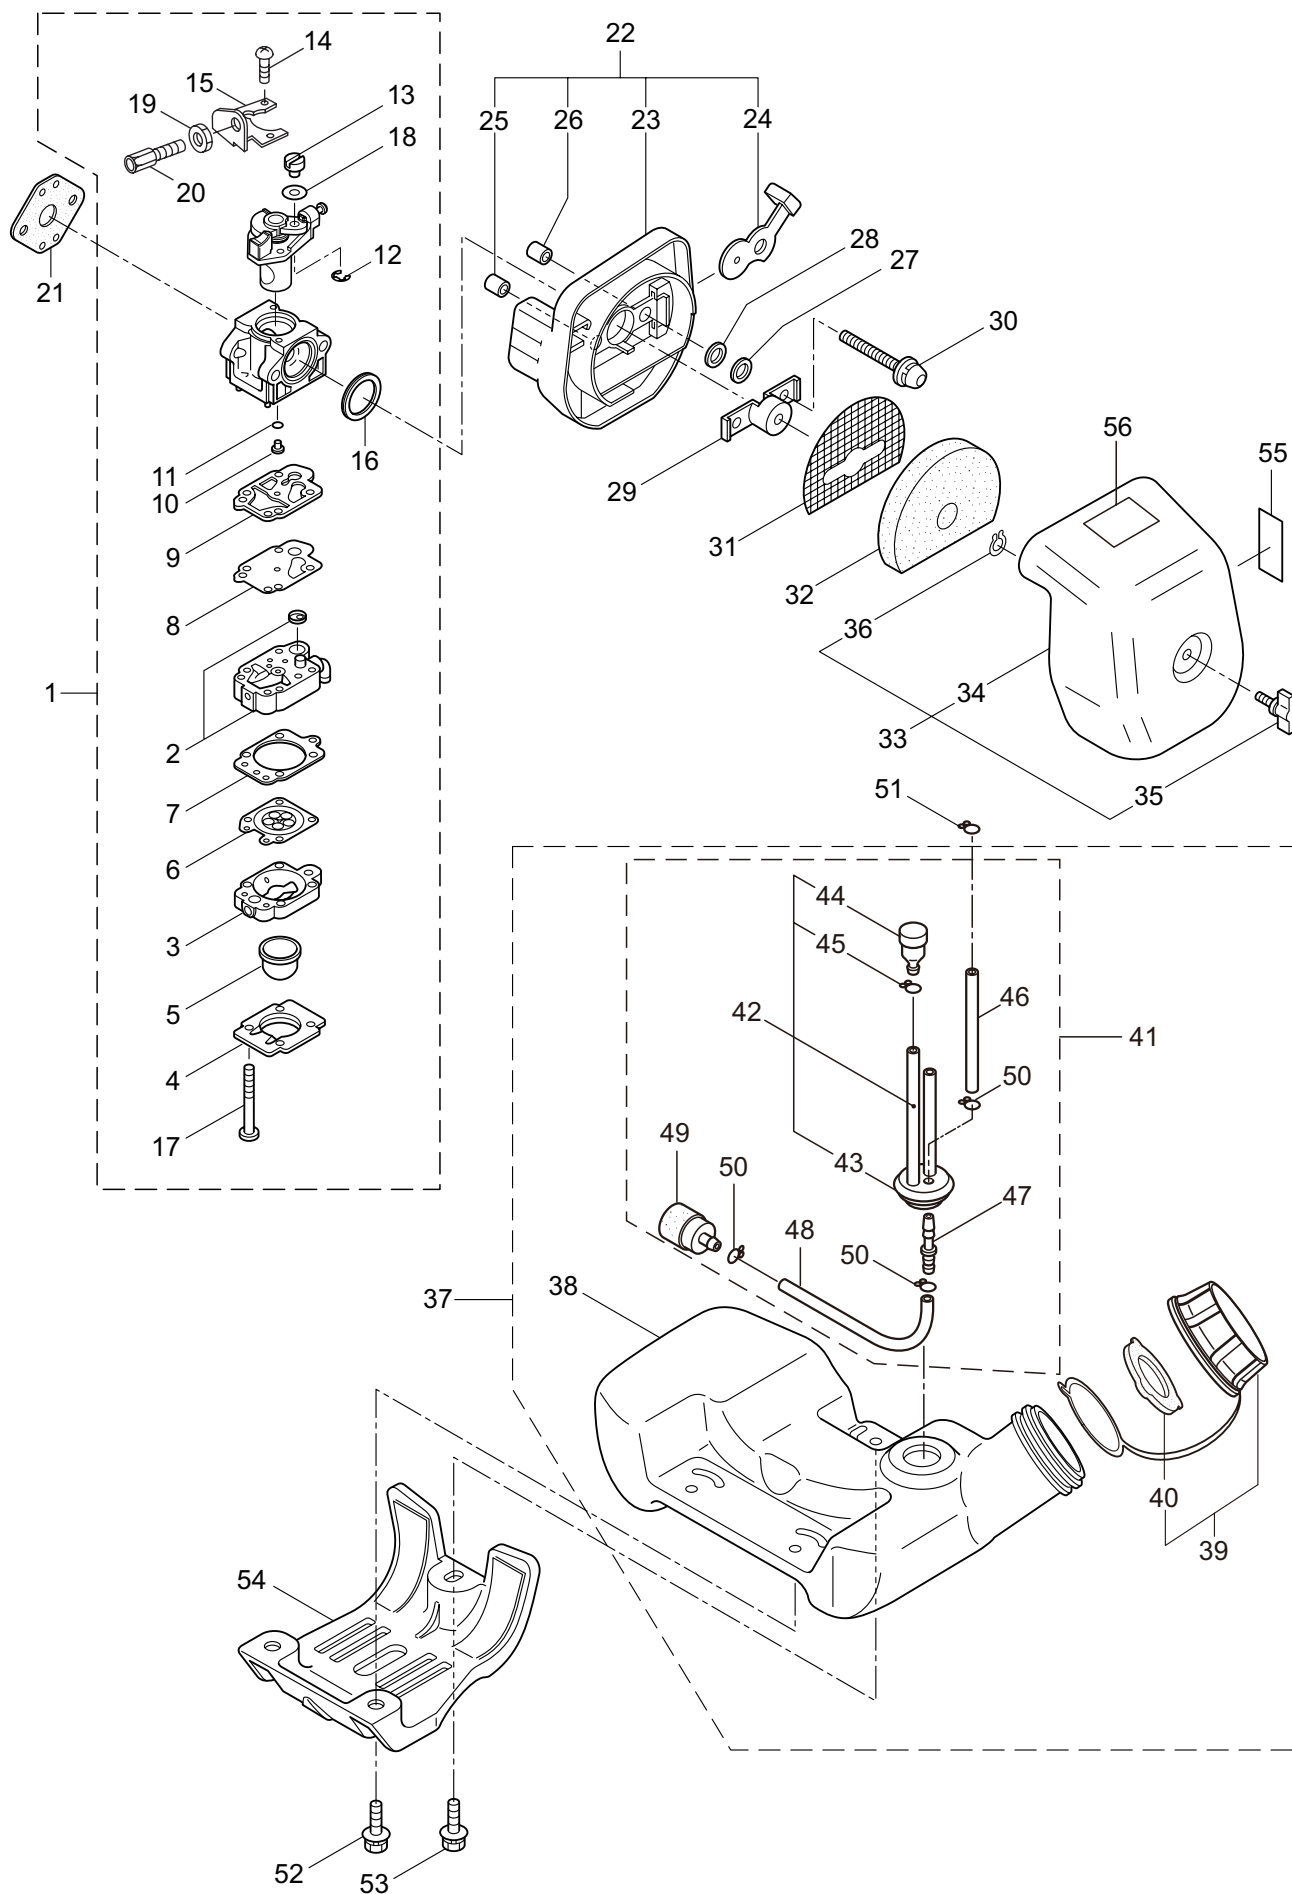




Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	286703	Carburetor Ass'y	1	Incl.2-20 New gasket required
4-2	264155	Pump Body	1	
4-3	262991	Purge Body	1	
4-4	262992	Cover Plate	1	
4-5	261874	Primer Bulb	1	
4-6	283905	Diaphragm, Meterring	1	
4-7	262993	Gasket	1	
4-8	262994	Diaphragm,Fuel Pump	1	
4-9	282576	Gasket	1	
4-10	281487	Main Jet	1	#37
4-11	261871	O-Ring	1	
4-12	261876	E-Ring	1	
4-13	261658	Swivel	1	
4-14	261875	Screw	2	
4-15	264677	Bracket	1	
4-16	261657	Packing	1	
4-17	262996	Screw	4	
4-18	264678	Washer	1	
4-19	261878	Nut	1	
4-20	263994	Adapter	1	
4-21	261864	Gasket	1	
4-22	268055	Air Filter Case Ass'y	1	Incl.23-26
4-23	268056	Air Filter Case	1	
4-24	268057	Valve	1	
4-25	268157	Sleeve	1	5.5x7.1x6L
4-26	268412	Sleeve	1	5.2x7.1x6.4L
4-27	263345	Packing	1	7.2x11xt1.3
4-28	263942	Washer	1	7.2x12xt0.15
4-29	263815	Stay	1	
4-30	264016	Cap Screw	2	M5x60
4-31	265026	Screen	1	
4-32	265027	Foam Element	1	
4-33	268058	Air Filter Cover Ass'y	1	Incl.34-36
4-34	268059	Air Filter Cover	1	
4-35	281438	Knob	1	
4-36	261734	Snap Ring	1	#5
4-37	246590	Fuel Tank Ass'y	1	Incl.34-46
4-38	285048	Fuel Tank	1	
4-39	289046	Tank Cap Ass'y	1	Incl.40
4-40	287058	Gasket	1	
4-41	289031	Fuel Pipe Pick-up Ass'y	1	Incl.42-50
4-42	289032	Fuel Pipe Ass'y	1	Incl.43-45
4-43	268065	Grommet	1	
4-44	261590	Breather	1	
4-45	261117	Clip	1	

4. EH230DSL  
 CARBURETOR, FUEL TANK

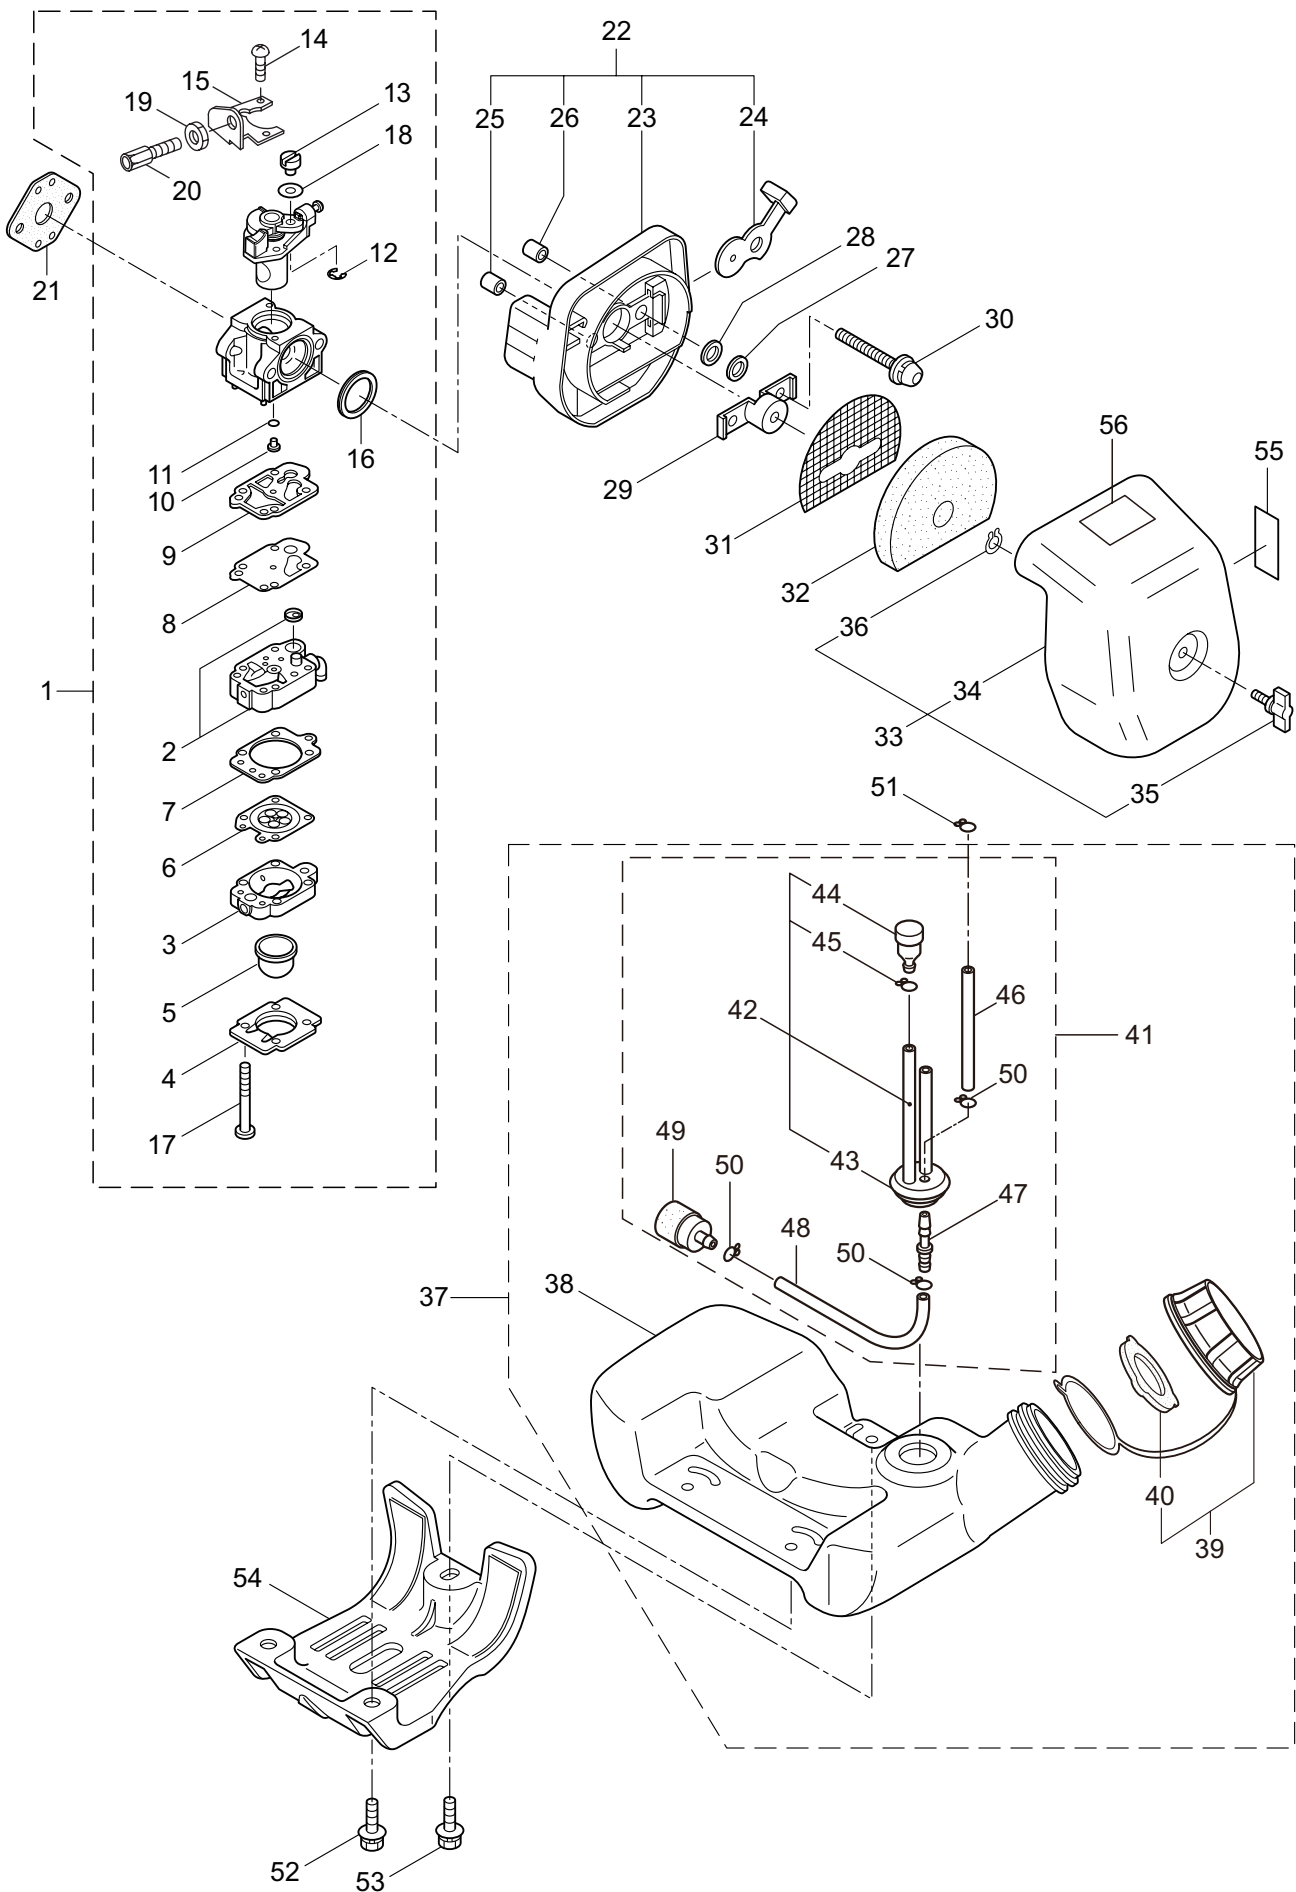

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	289028	Pipe A	1	3x5x53L
4-47	288921	Joint	1	
4-48	289033	Pipe	1	3x5x100L
4-49	277887	Filter Ass'y	1	
4-50	261117	Clip	3	
4-51	261117	Clip	1	
4-52	281714	Cap Screw	2	M5x20
4-53	281715	Cap Screw	1	M5x20
4-54	281447	Stand	1	
4-55	261352	Label	1	Choke
4-56	285188	Label	1	

5. EH230DSL  
ACCESSORIES

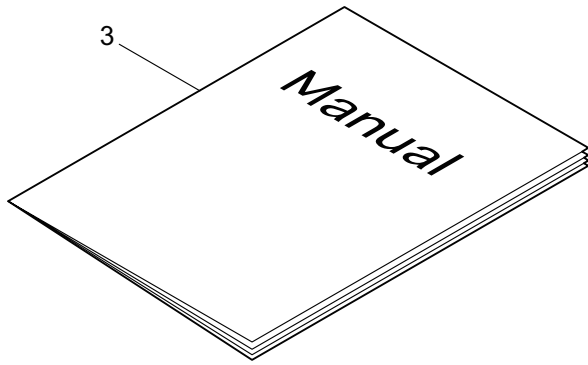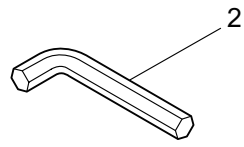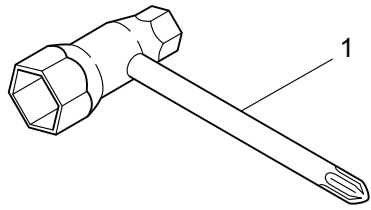



Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	210418	Box Spanner	1	13x19x(+)
5-2	219432	Wrench	1	4mm
5-3	242163	Instruction Manual	1	EH230DSL